


UCI-400 Control Translation Unit



UCI-400 Control Translation Unit

Note: Com 4 may be used as a time code input. If desired set port to RS-422 and use this pin out. 1=TC+, 2-4=Not used, 5=GND, 6-8=Not used, 9=TC-

4)RS-422 or 232 Serial Ports & Pin#'s
RS-232: 1=CD, 2=RX, 3=TX, 4=DTR, 5=GND, 6=DSR, 7=RTS, 8=CTS, 9=Not used
RS-422: 1=Not used, 2=RX-, 3=TX+, 4=Not used, 5=GND, 6=Not used, 7=RX+, 8=TX-, 9=Not used
 Note: To select RS-422 or RS-232 open the panel and locate the jumpers in the lower right hand corner of the panel as you view it from the top with the rear of the panel closest to you.

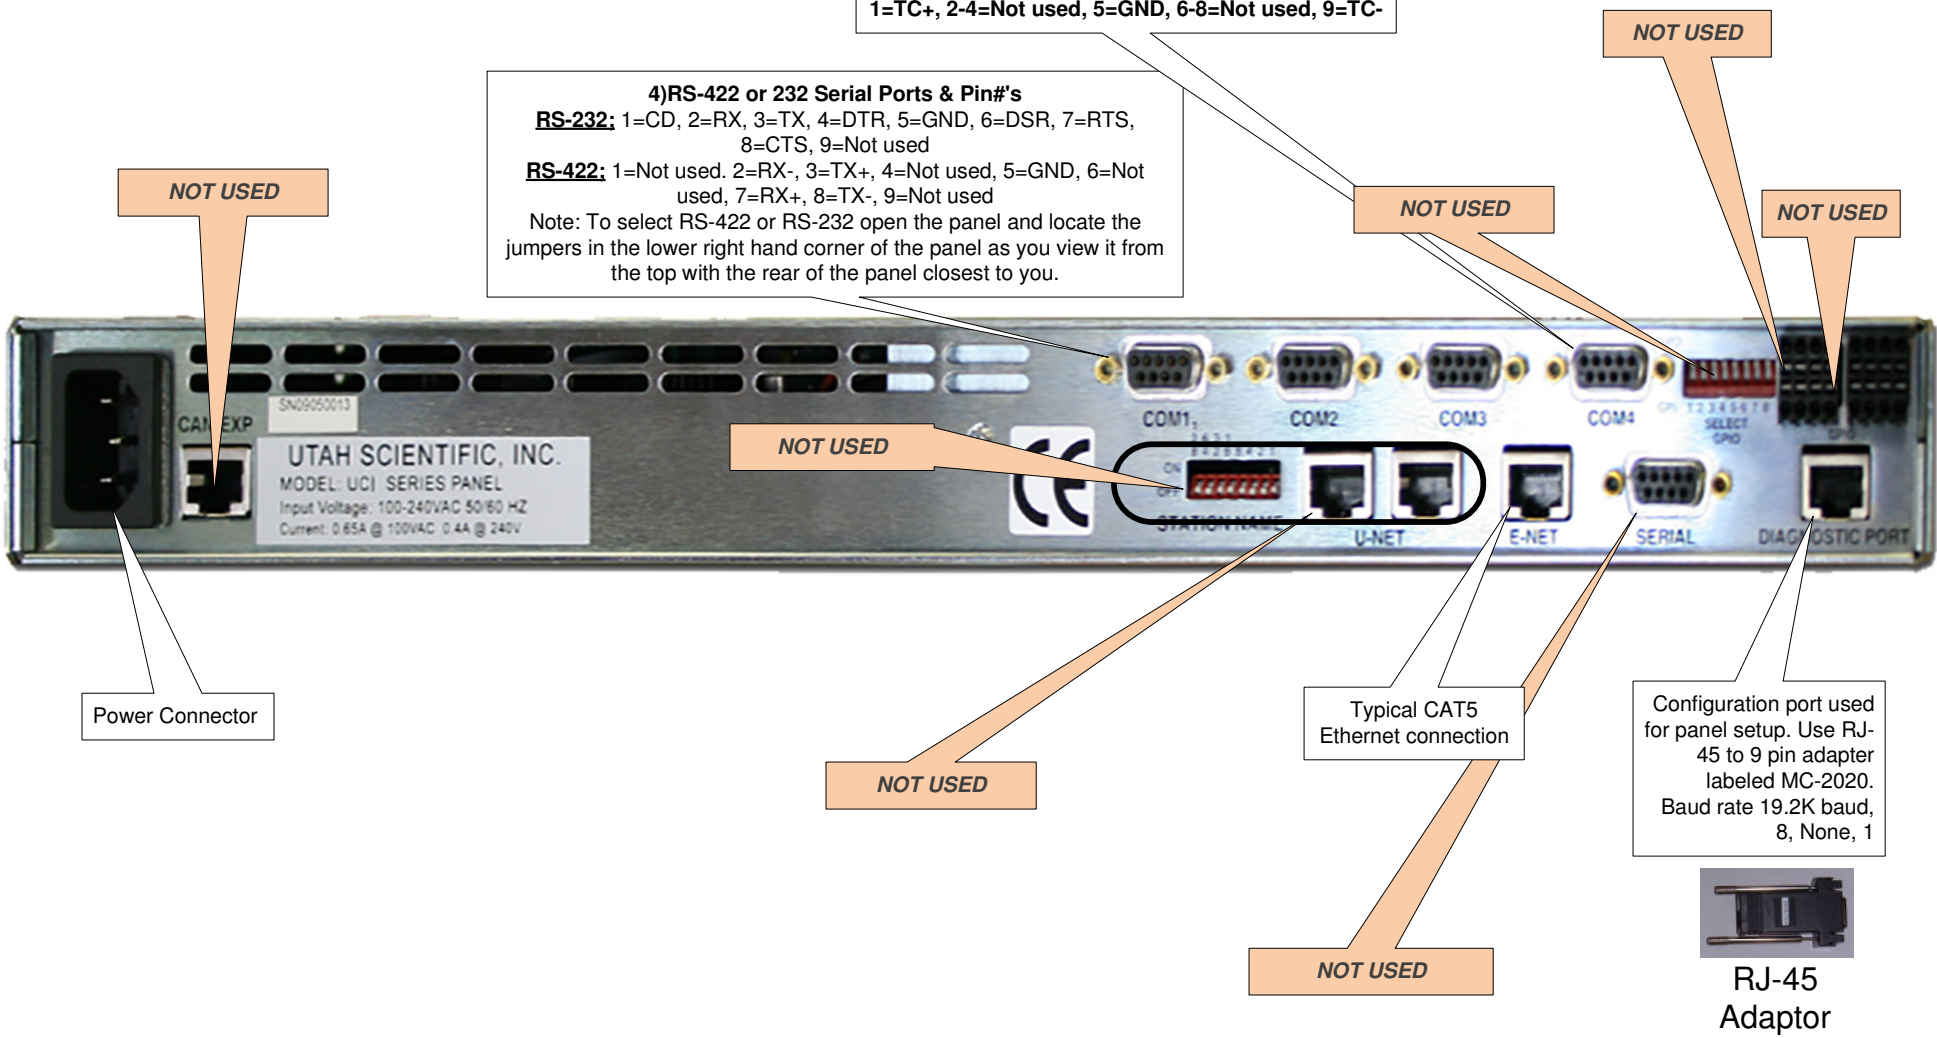

RJ-45 Adaptor