




---

## UTAH-100/UDS Compact Router Series

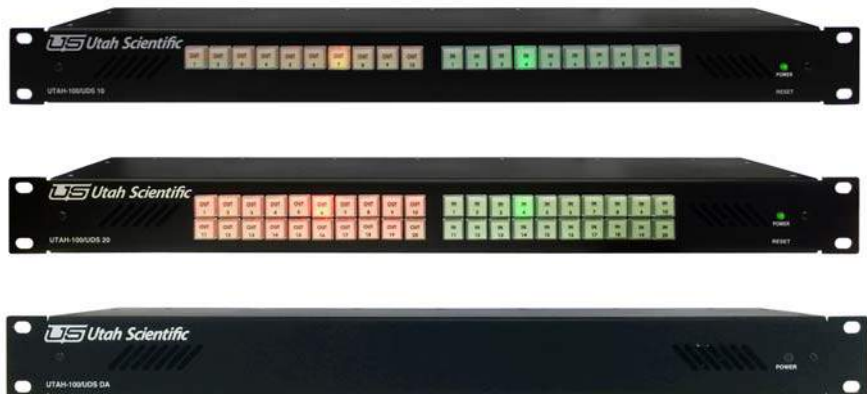

*System Setup and Operation*

---

---

---

## ***UTAH 100/UDS Compact Series- Operations Guide***

- Document Number: 82102-0090
- Document Version: 1.1
- Date: August 27, 2015
- Printed in U.S.A.

### ***Copyrights and Trademarks***

© 2015 Utah Scientific, Inc., All rights reserved. Any use or reproduction of this guide's contents without the prior written consent of Utah Scientific, Inc. is strictly prohibited.

- UTAH 100 is a trademarks of Utah Scientific, Inc.
- Windows is registered trademark of Microsoft Corporation.
- All other product names and any registered or unregistered trademarks mentioned in this guide are used for identification purposes only and remain the exclusive property of their respective owners.

### ***Notice***

Information contained in this guide is subject to change without notice or obligation. While every effort has been made to ensure that the information is accurate as of the publication date, Utah Scientific, Inc. assumes no liability for errors or omissions. In addition, Utah Scientific, Inc. assumes no responsibility for damages resulting from the use of this guide.

### ***FCC Compliance (USA) and Digital Equipment Compliance (Canada)***

This equipment has been tested and found to comply with the limits for a Class A, digital device, pursuant to Part 15, Subpart B of the FCC Rules and the Canadian EMC Requirement (ICES-003). These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.



Operation of this equipment in a residential area is likely to cause harmful interference, in which case, the user will be required to correct the interference at their own expense. Shielded cables must be used to ensure compliance with the FCC Class A limits.

---

## ***Declaration of Conformity***

### **Utah Scientific, Inc.**

4750 Wiley Post Way, Suite 150  
Salt Lake City, Utah 84116-2878 U.S.A.

We declare our sole responsibility that the UTAH-100/UDS Digital Routing Switcher is in conformance with the following standards:

### **Emission**

- EN55022:1994+A1&A2

### **Immunity**

- EN55024:1998
- EN61000-3-2
- EN61000-3-3

### **Safety**

- IEC 60950-1:2001 /EN 60950-1:2001

Following the provisions of the Directive(s) of the Council of the European Union:

- EMC Directive 89/336/EED
- Low Voltage Electrical Directive 72/23/EEC

Utah Scientific, Inc. hereby declares that the product specified above conforms to the above Directive(s) and Standard(s).





## ***Important Safeguards and Notices***

This section provides important safety guidelines for the Operator and Service Personnel. Specific warnings and cautions are found throughout the guide where they apply, but may not appear here. Please read and follow the important safety information, specifically those instructions related to risk of fire, electric shock, or injury to persons.



### **Safety Symbols**

- Hazardous Voltage symbol



- Caution symbol. The product is marked with this symbol when it is necessary to refer to the manual to prevent damage to the product.

### **Warnings**

Please observe the following important warnings:

- Any instructions in this guide that require opening the chassis, changing a power supply, or removing a board, should be performed by qualified personnel only. To reduce the risk of electric shock, do not perform any service unless you are qualified to do so.
- Heed all warnings on the unit and in the operating instructions.
- Do not use this product in or near water. Disconnect AC power before installing any options or servicing the unit unless instructed to do so by this manual.
- This product is grounded through the power cord ground conductor. To avoid electric shock, plug the power cord into a properly wired receptacle before connecting the product inputs or outputs.
- Route power cords and other cables so they won't be damaged.
- The AC receptacle (socket) should be located near the equipment and be easily accessible.
- Disconnect power before cleaning. Do not use any liquid or aerosol cleaner - use only a damp cloth.





- Dangerous voltages exist at several points in this product. To avoid personal injury, do not touch exposed conductors and components while power is on. Do not insert anything into either of the systems two-power supply cavities with power connected.
- Do not wear hand jewelry or watches when troubleshooting high current circuits, such as power supplies. During installation, do not use the door handles or front panels to lift the equipment as they may open abruptly and injure you.
- To avoid fire hazard when replacing fuses, use only the specified correct type, voltage and current rating as referenced in the appropriate parts list for this product. Always refer fuse replacement to qualified service personnel.
- Have qualified personnel perform safety checks after any service.

#### **Cautions**



Please observe the following important cautions:

- When installing this equipment do not install power cords to building surfaces. To prevent damage when replacing fuses, locate and correct the problem that caused the fuse to blow, before reconnecting power.
- Use only specified replacement parts



## *Company Information*

### **Utah Scientific, Incorporated**

**4750 Wiley Post Way, Suite 150  
Salt Lake City, Utah 84116-2878 U.S.A.**

- Telephone: +1 (801) 575-8801
- FAX: +1 (801) 537-3098
- Technical Services (voice): +1 (800) 447-7204
- Technical Services (FAX): +1 (801) 537-3069
- E-Mail -General Information: [info@utsci.com](mailto:info@utsci.com)
- E-Mail -Technical Services: [service@utsci.com](mailto:service@utsci.com)
- World Wide Web: <http://www.utahscientific.com>
- **After Hours Emergency:** +1 (800) 447-7204. Follow the menu instructions for Emergency Service.

---

## ***Warranty Policies***

### **Hardware Warranty**

Utah Scientific, Inc. warrants to the original purchaser that the Utah Scientific hardware is free from defects in materials and workmanship and will perform substantially in accordance with the accompanying written materials under normal use and service for a period of two (2), five (5), or ten (10) years from the date of shipment. Any implied warranties on hardware are limited to the above three warranty periods (depending on purchase). Some states/jurisdictions do not allow limitations on duration of an implied warranty, so the above limitation may not apply to certain specific purchasers.

### **Software Warranty**

Utah Scientific warrants that the software will perform substantially in accordance with the accompanying written materials for a period of one (1) year from the date of shipment.

### **Customer Remedies**

For the first one (1) year after purchase of the software and the first two (2), five (5), or ten (10) years after the date of purchase of the hardware, Utah Scientific's and its suppliers' entire liability and purchaser's exclusive remedy shall be, at Utah Scientific's option, either:

- Return of the price paid, or
- Repair or replacement of the software or hardware that does not meet the above warranties and is returned to Utah Scientific under the returned materials authorization (RMA) process with freight and forwarding charges paid.

After the initial warranty periods, purchaser's exclusive remedy is the repair or replacement of the hardware upon payment of a fixed fee to cover handling and service costs based on Utah Scientific's then-current price schedule. The above warranties are void if failure of the software or hardware has resulted from an accident, abuse, or misapplication. Any replacement software or hardware will be warranted for the remainder of the original warranty period or thirty (30) days, whichever is longer.





---

***No other warranties.*** To the maximum extent permitted by applicable law, Utah Scientific and its suppliers disclaim all other warranties, either express or implied, including, but not limited to implied warranties of merchantability and fitness for a particular purpose, with regard to the software, the accompanying written materials, and any accompanying hardware. This limited warranty gives the purchaser specific legal rights. These rights may vary in certain states/jurisdictions.

***No liability for consequential damages.*** To the maximum extent permitted by applicable law, in no event shall Utah Scientific or its suppliers be liable for any damages whatsoever (including without limitation, damages for loss of business profits, business interruption, loss of business information, or any other pecuniary loss) arising out of the use of or inability to use Utah Scientific products, even if Utah Scientific has been advised of the possibility of such damages. Because some states/jurisdictions do not allow the exclusion or limitation of liability for consequential or incidental damages, the above limitation may not apply in those circumstances.

---

---

*Table of Contents*

**Section 1**

**Overview**

Introduction .....	1-1
System Architecture .....	1-3
System Diagrams .....	1-4
UDS 10x10 .....	1-4
UDS 20x20 .....	1-4
8x32 DA .....	1-5
UDS XY .....	1-5
Installation .....	1-6
Power Connections .....	1-6
Ethernet Connections .....	1-7
RCP-1 Serial Port .....	1-8
Diagnostic Serial Port .....	1-9
140033-15 Adapter Pinout and Schematic .....	1-10
Reference Connections .....	1-10
Video Connections .....	1-11
Front Panel Controls and Indicators .....	1-12
Power LED .....	1-12
Reset Switch .....	1-12
Components .....	1-13
Base Crosspoint Card (121352-1) Revision 02 .....	1-13
Power Supplies .....	1-13
Control Circuitry .....	1-14
Crosspoint .....	1-15
Input Circuits .....	1-15
Output Circuits .....	1-15
Bi-Directional Circuits .....	1-15
Expansion Connectors .....	1-15
Expansion Input Card (121353-1) Revision 02 .....	1-16
Power Supplies .....	1-16
Input Circuits .....	1-16
Expansion Output Card (121354-1) Revision 02 .....	1-17
Power Supplies .....	1-17
Output Circuits .....	1-17
Local Control Panel (121355-1) Revision 02 .....	1-18

---

System Interface .....	1-18
Input Switches and LED's .....	1-19
Output Switches and LED's .....	1-19
Button Legends .....	1-19

## **Section 2**

### **Network Configuration**

Introduction .....	2-1
System Setup Requirements .....	2-2
UTAH-100/UDS Network Configuration .....	2-3
New Configuration on Independent Network .....	2-3
Router Applet Activation and Configuration .....	2-9
Panel Applet Activation and Configuration .....	2-12

## **Section 3**

### **The Router Applet**

Router Configuration .....	3-1
Security .....	3-3
Data Comm .....	3-4
TCP RCP-3 (Network) .....	3-4
Serial RCP-1 .....	3-4
DHCP .....	3-5
Sources .....	3-6
Destination Creation from Within the List .....	3-12
Panel Views .....	3-14
Sorting Option .....	3-15
Destination Blocks .....	3-18
Salvos .....	3-19
Accounts .....	3-22
Save Button .....	3-24
Router Control .....	3-25
Source and Destination Management .....	3-25
Preset (checkbox) .....	3-28
Changing the Button Color Scheme .....	3-30
Destination Reset Mode (checkbox) .....	3-31

Multiple Destination Selection .....	3-31
Audio .....	3-32
Macro buttons .....	3-32
Salvos .....	3-34
Preset List Window .....	3-35

## **Section 4**

### ***The Control Applet***

Introduction .....	4-1
The UTAH-100/UDS CP .....	4-2
Front View .....	4-2
Rear View .....	4-2
Setup .....	4-2
Panel Configuration .....	4-3
System .....	4-5
Network .....	4-5
Network Parameters .....	4-6
Encoding .....	4-6
Panel Layout - Config Controls .....	4-7
Layouts - Single and Multi-Dest .....	4-9
Single Destination .....	4-9
Multi-Dest layout .....	4-10
XY-32 Configuration .....	4-11
Print Option .....	4-14
Control Panel .....	4-15

## **Section 5**

### ***Specifications and Alarms***

Frame Specifications .....	5-1
Width .....	5-1
Depth .....	5-1
Sizes .....	5-1
Power Supply .....	5-1
Control Connections: RJ-45 Ethernet .....	5-2
I/O Module Specifications .....	5-3
Multi-Rate Digital Input Card .....	5-3

---

Multi-Rate Digital Output Card .....	5-3
FLEX-I/O Option .....	5-3
Alarm Conditions .....	5-4

## ***Appendix A***

### ***RCP1 Protocol for UDS***

Matrix Refresh Report Enable .....	A-1
Matrix Refresh Report Disable .....	A-1
Matrix Change Report Enable .....	A-2
Matrix Change Report Disable .....	A-2
Matrix Take Report Enable .....	A-3
Matrix Take Report Disable .....	A-3
Matrix Section Refresh .....	A-3
Matrix Take Command .....	A-4
CALCULATE <Checksum> .....	A-5
MISC items .....	A-5

## ***Appendix B***

### ***System Update***

Introduction .....	A-1
System Setup Requirements .....	A-2
Settings File Update .....	A-2
Updating the Router Config Applet .....	A-3
Updating the Panel Config Applet .....	A-6

## ***Appendix C***


### ***Troubleshooting***

Hard Reset .....	B-1
Factory Reset .....	B-1
Serial Port Network Configuration .....	B-1
System Fails to Reboot Properly .....	B-2
Applet Opens with Wrong or Old View .....	B-2

***Appendix D***

***Maintenance Functions***

In This Appendix .....	D-1
Changing Button Legends .....	D-2
Using the Template .....	D-3
Removing and Inserting button legends .....	D-5
Ordering Parts .....	D-6







# Section 1

# Overview

## Introduction

The UDS Utility Router Series is a compact, self-contained routing switcher system designed for SDI video routing. Using common components, systems of 10x10, 20x20 and 8x32 DA can be constructed in a 1 RU chassis using standard BNC connectors. All necessary control and cooling components reside in the chassis.

The Utility Series builds off of the existing UDS control system allowing for up to 10 remote connections consisting of automation systems, hardware based control panels or software based control panels. RS-232 or RS-422 control is also available using standard RCP-1 protocols to a single DB9F port on the chassis.

The 10x10 and 20x20 routers can be ordered with or without an integral control panel on the front of the unit. This control panel provides dedicated output and input select buttons that are fixed functionality -- they cannot be configured. The button legends can be modified however, to be more descriptive of the source or destination controlled by that key. See Appendix D for more information.

Each system has optional redundant power supply connections, and consumes less than 30 watts of power.

## Overview

---

The video path within the router is capable of 18 Mb/Sec to 3Gb/sec. Reclocking is performed at 270Mb/Sec, 1.485Gb/Sec and 2.970 Gb/Sec, and any other frequency is passed with the reclocking automatically bypassing. The reclocking feature is DVB-ASI compatible. Very long cable lengths are achieved by reclocking each input signal directly after it is received, providing the cleanest signal possible to the system.

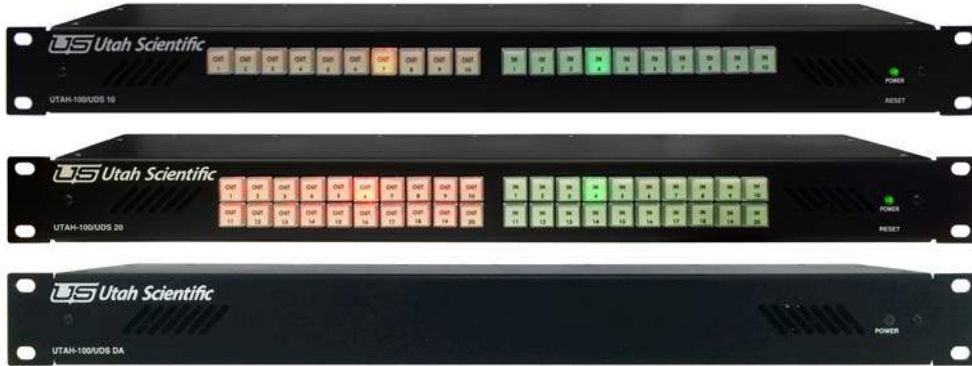


Figure 1-1. UT-100 UDS 10x10, 20x20, and 8x32



## System Architecture

Each of the three possible configurations begin with a Base Crosspoint card, the 121352-1. This card contains all control circuitry, crosspoints, 8 dedicated inputs, 10 dedicated outputs, and two Bi-Directional ports. This card also has two expansion slot connections for additional boards.

For a 10x10 router, only this base card is used.

For a 20x20 router, an Input Expansion board (121353-1) and an Output Expansion Board (121354-1) is added to the Base Crosspoint.

For an 8x32 DA product, both expansion slots are filled with Output Expansion Cards and the system automatically makes the bidirectional ports Outputs when this configuration is recognized, resulting in an 8x32 port system.

Each system can contain a local control panel. The default configurations have the 8x32 without a local panel, the 10x10 with a local 20 button panel, and the 20x20 with a local 40 button panel. These local panels have a fixed configuration that is not changeable from the control system. If more advanced panels are desired, systems can be ordered without local panels and the UDS-CP or UDS-XY can be added as external panels.




Figure 1-2. UDS-XY

The front panels include generic labels that can be changed to suit your installation.


*(See Appendix D for more information)*

## System Diagrams

### UDS 10x10

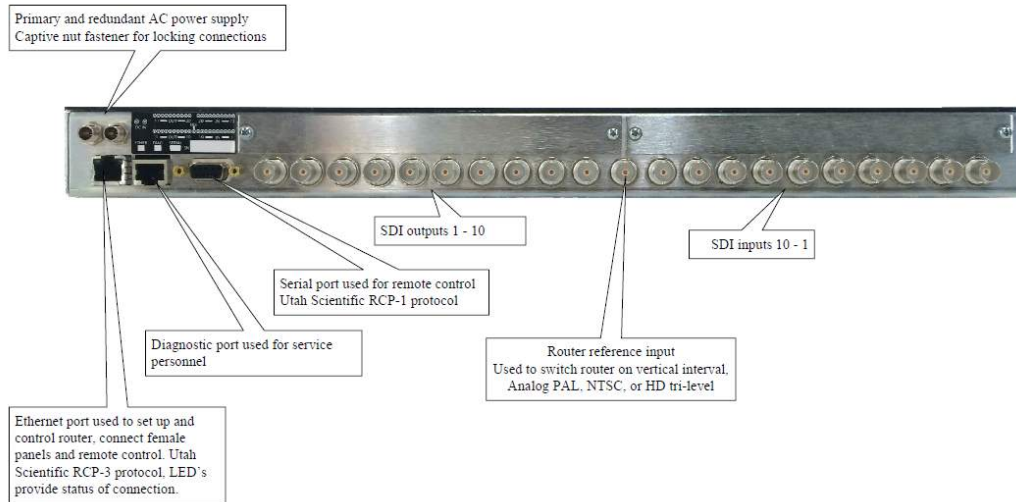


### UDS 20x20

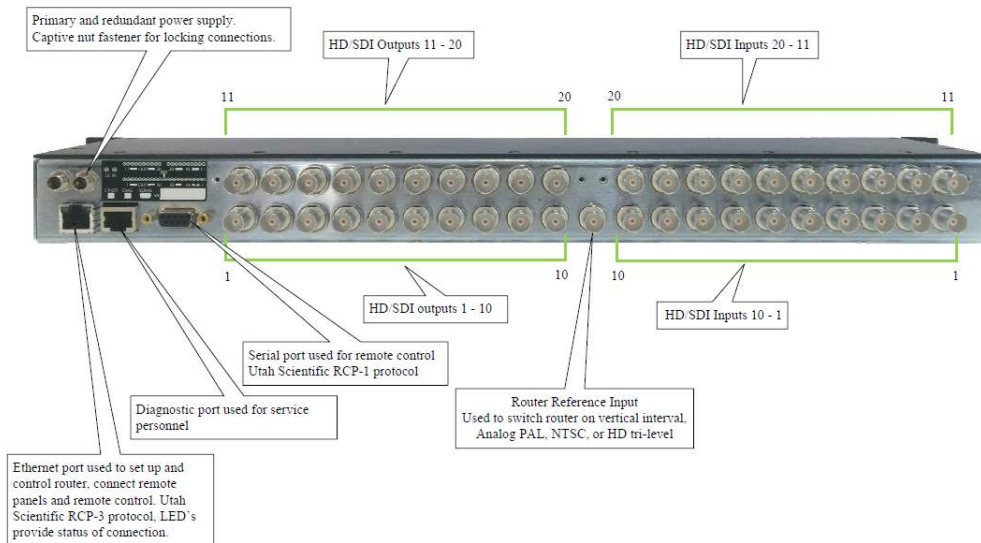




### 8x32 DA

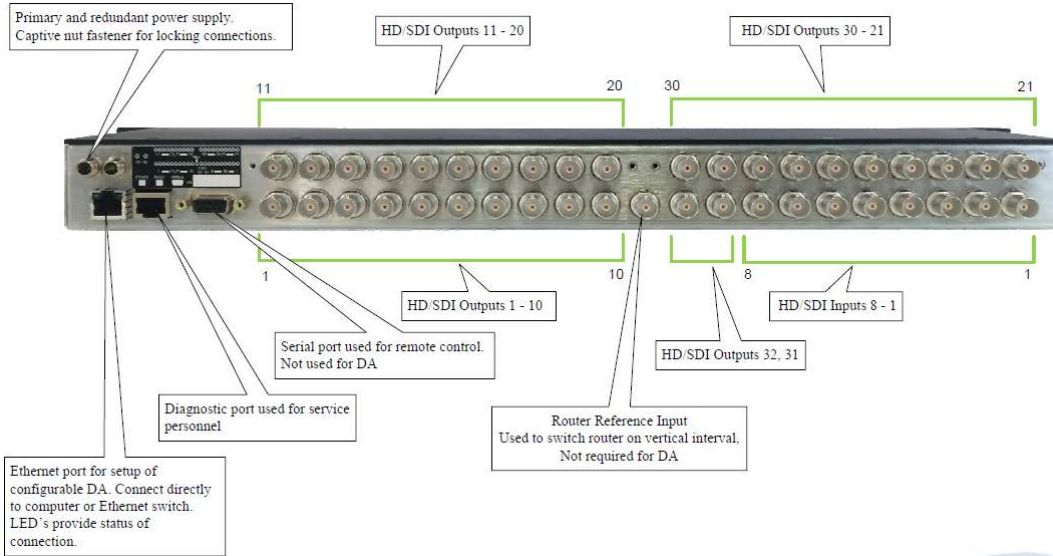

### UDS XY

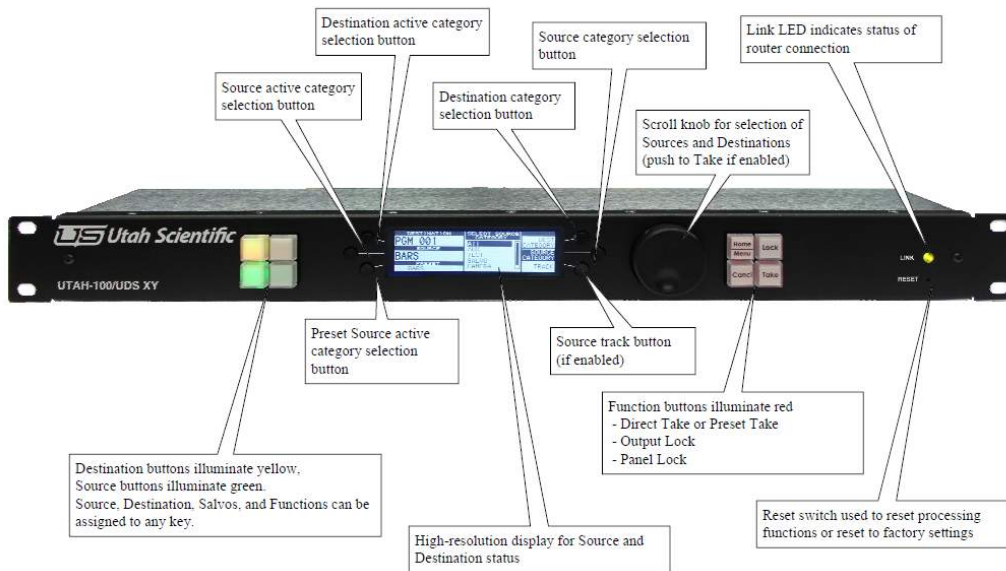

## Installation

### *Power Connections*



Figure 1-3. LH rear panel connections (power connectors)



Figure 1-4. 140033-08 power supply here

There are two captive-nut power connections on the rear of the chassis. They accept input from the 140033-08 Utah Scientific 30W power supply. Either port can be used, and one or two supplies can be connected or redundancy.



## Ethernet Connections



Figure 1-5. LH rear panel connections - Ethernet Jack

Using standard CAT-5 or CAT-6 Ethernet cable, connect this port to an Ethernet Switch. This port is an Auto MDI-X port, so if desired it can be connected directly to a PC or UDS Remote Control Panel without the need for a crossover cable. Cable lengths of up to 100 meters are supported. This port is 10/100 capable.

The two LED's in this port indicate link state and speed.

- Both LED's ON solidly indicate no link.
- The LH LED flashing and the RH LED solid indicate 10 Mb/Sec link.
- The LH LED flashing and the RH LED off indicate 100 Mb/Sec link.

### **RCP-1 Serial Port**



**Figure 1-6. LH rear panel connections - DB-9**

The DB9 Serial port can be used to remotely control the router using standard RCP-1 protocols. Contact Utah Scientific Customer Support for a copy of this protocol. The baud rate, data/start/stop bit configuration and 232/422 mode of this port are configured in the Web Based GUI described in Section 2 of this manual. The pinout of this port is –

**Table 1-7.**

DB9 Pin	RS-232 Signal	RS-422 Signal
2	TX	TX+
3	RX	RX+
5	Ground	Ground
7	N/C	TX-
8	N/C	RX-



**Diagnostic Serial Port**



**Figure 1-8. LH rear panel connections - RJ45 Serial Port**

The RJ-45 serial port is used for Diagnostic connections only. Utah Scientific Service Personnel may ask you to connect a serial port here to diagnose certain issues. The system is delivered with an adapter, USI PN 140033-15, that allows you to connect a CAT5 patch cord to this port, then to the adapter, and then to an RS-232 port on a standard PC. The pinout of this port is –

**Table 1-9.**

RJ45 Pin	RS-232 Signal
1	UDS Debug TX
2	Ground
4	SC-CPU Debug TX
5	SC-CPU Debug RX
7	Ground
8	UDS Debug RX

### 140033-15 Adapter Pinout and Schematic

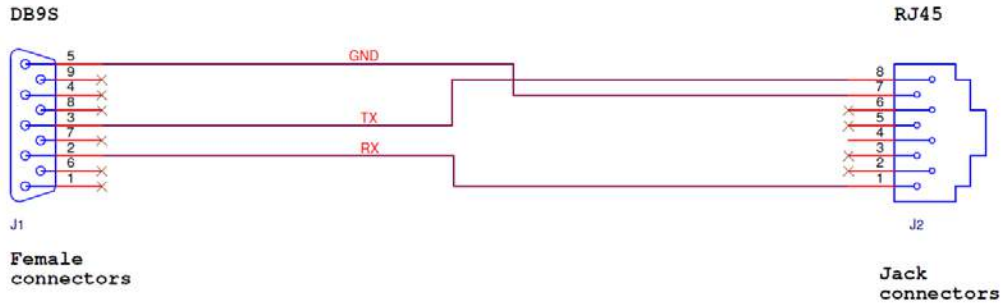


Figure 1-10. Pinout Schematic

DB9S to RJ45			
Name	PIN	Wire Color	PIN
GND	5	Brown	7
RX	2	White	1
TX	3	Blue	8

### Reference Connections


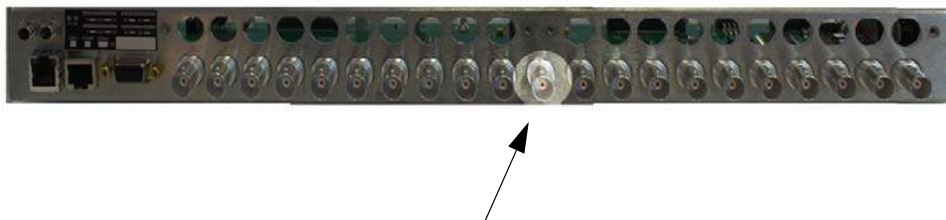


Figure 1-11. Rear Panel - Center BNC on the lower row

The BNC on the lower row of the router directly in the center is for an analog reference signal used to switch the router in vertical interval. Connect Analog Black Burst or Tri-Level Sync to this port.

**Video Connections**

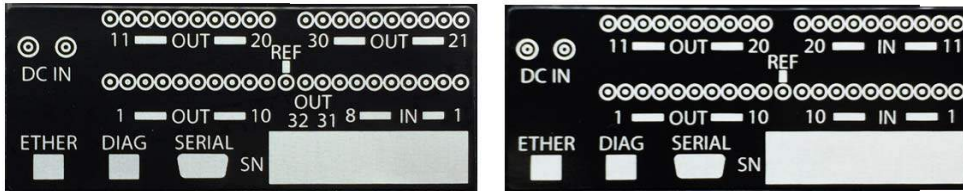

**Figure 1-12. Rear Panel - label indicating IO Numbers**

The 40 BNC connectors have different numbering based on the 3 different configurations. Each configuration has a label indicating which BNC's are which. Refer to this label when connecting Input or Output Coax cables to the BNC's.

## Front Panel Controls and Indicators

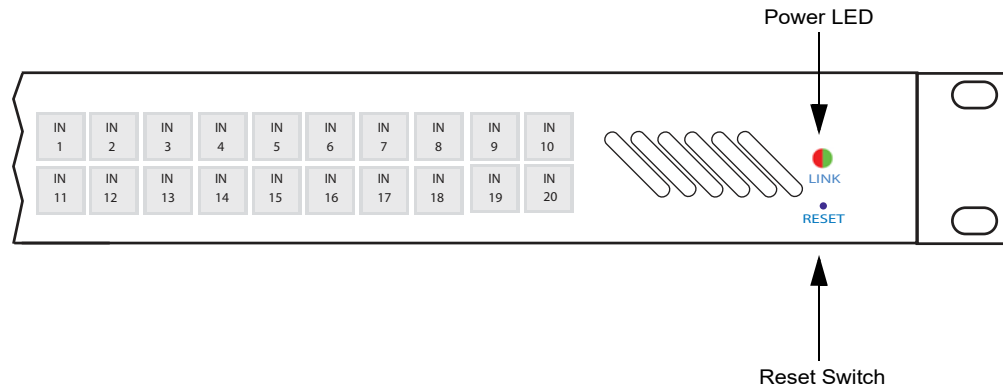


Figure 1-13.

### Power LED

- Green indicates normal operation.
- Red indicates a fault with temperature or power supplies.

### Reset Switch

- Pressing this switch momentarily will reset all processing functions.
- Holding this switch in for 10 seconds will default all configuration settings to the original factory settings.

The IP setting's default is 192.168.5.180

The serial port default is RS-232, 115k baud, 8,N,1.

## Components

### *Base Crosspoint Card (121352-1) Revision 02*

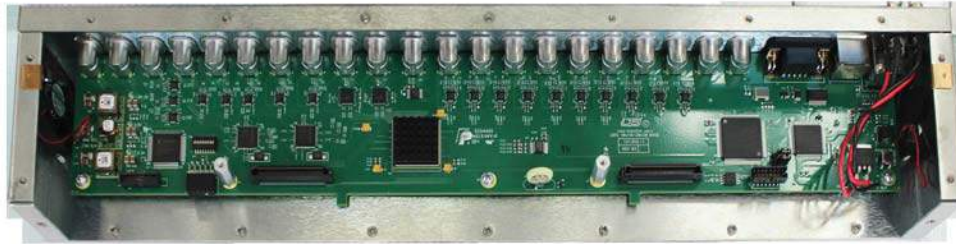


Figure 1-14. Crosspoint Card - #121352-1

### ***Power Supplies***

This system utilizes the standard external 12 Volt DC power supply, 140033-08. It accepts one or two supplies for redundancy. Diode D2 acts as an O ring diode for the two external power supplies.

The 12VDC rail feeds the two attached fans directly, and also feeds the three regulators that create the lower DC voltages required for the board. U35 creates a 6 amp 3.3V rail, U29 creates a 2 amp 2.5V rail, and U24 creates 6 amp 1.2V rail.

All of these supplies are fixed output and non-adjustable. U34, an LTC2910 voltage supervisor, monitors all of the voltage and generates a reset not signal if any are out of tolerance. LED DS3 illuminates if all of the supplies are in tolerance.

## **Control Circuitry**

The control circuitry for this card is centered around a Freescale K60 MCU and Xilinx FPGA. The CPU interfaces control inputs from Ethernet and Serial to the FPGA, which controls all of the switching functions within the router.

FPGA and Memory. The K60 communicates to the XC6SLX9 FPGA (U27) and the battery backed SRAM (U37). The 16 bit multiplexed Flexbus from the K60 connects to both of these components to control router switches and store status. FPGA support circuitry includes the SPI Configuration PROM U36 and programming port J24. There are two 3 position jumpers –

JP3 – Should always be installed on 1-2.

JP4 - Place on 1-2 to program the FPGA, 2-3 to program the CPU.

Also, sync stripper component U6 receives analog reference and presents H,V, and F to the FPGA. The front panel switches and LED's are monitored and controlled by a soft core processor inside the FPGA.

A general description of the control lines from the FPGA are -

- FPCA1-8. These lines make up two I2C busses, reset and presence control lines for the front panel.
- SG1-6. Control lines to the Scangate device (Page 8) that allow the CPU to read the board part number and revision.
- ECON1-8. Two I2C busses and 4 presence lines to the two expansion connector slots (Page 11)
- A0-7 and XPC0-3. Control lines to the Crosspoint chip (Page 10)
- BISP0-5. SPI control lines to the two bi-directional ports.
- RXn0-1. Control lines that make the bi-directional parts either inputs or outputs.
- CN0-1. I2C Bus to the two on-board reclocker components.

External port interconnects. The CPU connects to the following external ports - Ethernet, DB9 and diagnostic RJ-45 serial. The Ethernet port, made up of PHY component U25 and MagJack J1, is a 10/100 Mb compatible port with no configurable elements.



### **Crosspoint**

The crosspoint is a M23636 (U28). All input signals are AC coupled into the device and outputs are DC Coupled. A heatsink is installed on the IC.

### **Input Circuits**

Inputs 1-8 are made up of M21564 cable equalizers that feed M21350 reclocking components. These reclocker's automatically lock to and reclock signals at 270, 1485 and 2970 Mb/Sec rates, and automatically bypass other signals. The bandwidth is from 18 Mb/Sec to 3.2Gb/Sec. There are no adjustments on these inputs. The differential pairs created by the reclocker's feed directly into the crosspoints.

### **Output Circuits**

There are 10 dedicated outputs on the board. They are DC coupled to the crosspoint and the outputs driven by M21328 cable drivers.


### **Bi-Directional Circuits**

Two LMH0387 bi-directional components make up the bi-directional ports. They function as cable equalizers or cable drivers depending on the state of the RX- pin. There is both an input and an output connection to the crosspoint for each of these devices.

### **Expansion Connectors**

The expansion connectors will accept either 121353-1 Input cards or 121354-1 output cards. The Left hand connector (JP1) connects to the crosspoint on inputs 11-20 and outputs 21-30. The right hand connector (JP2) connects on outputs 11-20 and inputs 21-30. 12 VDC power is applied to each of these slots as well as control signals.

### ***Expansion Input Card (121353-1) Revision 02***

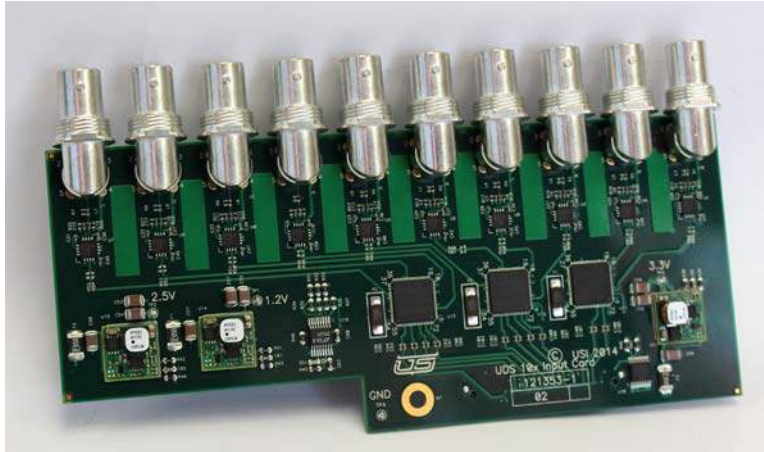

**Figure 1-15.** 121353-1 Here

This card is a simple board that receives and reclocks 10 input signals and then drives them to the base crosspoint card. It has local power supplies and control circuitry.

#### ***Power Supplies***

The 12 VDC from the base card is fused and then regulated to 3.3, 2.5 and 1.2 VDC 2 amp rails by U17, U15 and U14 respectively. This page also details a small I2C IO expander (U18) that identifies this card as an input card.

#### ***Input Circuits***

Inputs 1-10 are made up of M21564 cable equalizers that feed M21350 reclocking components. These reclocker's automatically lock to and reclock signals at 270, 1485 and 2970 Mb/Sec rates, and automatically bypass other signals. The bandwidth is from 18 Mb/Sec to 3.2 Gb/Sec. There are no adjustments on these inputs. The differential pair's created by the reclocker's feed directly into the crosspoints.



**Expansion Output Card (121354-1) Revision 02**



**Figure 1-16. 121354-1 Here**

This card is a simple board that receives 10 output signals from the crosspoint core and drives them out of BNC's. It has a local power supply and control circuitry.

**Power Supplies**

The 12 VDC from the base card is fused and then regulated to 3.3 VDC by U11. This page also details a small I2C IO expander (U12) that identifies this card as an output card.

**Output Circuits**

Outputs 1-10 are made up of signals delivered to this board from the crosspoint, and then driven out of BNC's by M21328 cable drivers.

## **Local Control Panel (121355-1) Revision 02**



**Figure 1-17. Front Panel - #121355-1**

This assembly is a simple control panel that has 10 or 20 buttons to select outputs and 10 or 20 buttons to select inputs. The output buttons are backlit in amber (Red+Green) and the inputs are backlit in green.

The keys are polled and the top row of LED's lit by one I2C bus, and the lower row of keys lit by another I2C bus. This allow short loading of the maximum number of components for the 10x10 panel.

The Left Hand 20 buttons are outputs, and the right hand 20 buttons are inputs.

### **System Interface**

J1 is a 20 pin connector that carries 3.3 VDC from the base card as well as reset signals, I2C Busses, and key press interrupts. Also on this page is a TCA8418 keyboard decoder IC that reports switch commands back to the processor.



### ***Input Switches and LED's***

Each LED is backlit by virtue of a voltage divider (See R58 and R59 for led DS20) and actively lit, when appropriate, by an associated transistor turning on (See Q10). Each transistor is driven from a separate output of the TCA6416 I2C IO expander associated with that bank of LED's (10 per).

### ***Output Switches and LED's***

The Output section has a green and a red LED for each switch, to provide an amber backlit color. The same voltage divider and transistor for actively lighting the LED's is use in this section.

### ***Button Legends***

The legends in this panel can be remade to label them for a users facility. See Appendix D for tools and procedures to replace button legends.





## Section 2

### UTAH-100/UDS Browser Utility

# Network Configuration

#### Introduction

This guide describes the network configuration for the UTAH-100/UDS Router and Panel. Using two setup scenarios; New Configuration on an Independent Network, and New Configuration on an Existing Network. These are the first steps required to configure and control the system.

## System Setup Requirements

- Windows™ operating system 7
- Java 7.07™ or newer
- Internet Explorer™, Firefox™, or Chrome™
- Ethernet connection


All UDS devices - PC, Router, and Panel - connect over Ethernet on a house network, or within a stand-alone (direct) mode. The system will provide default IP address during setup, or you can use unique IP addresses if required within your operation.



## UTAH-100/UDS Network Configuration

### *New Configuration on Independent Network*

This scenario consists of a router and a panel working in a stand-alone mode with one or more PC to complete an independent, stand alone network.

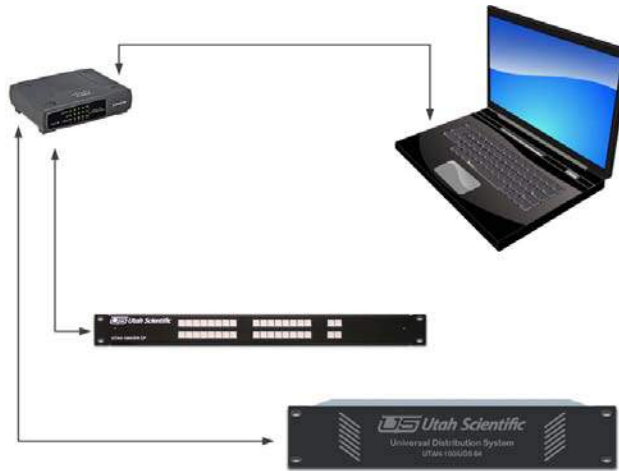

**FIGURE 1.**

New configuration on an independent network is relatively simple, involving Ethernet connection between the PC and devices (router and panel) only, as a stand alone network. Simply connect all devices together as shown in Figure 1 for basic setup. In this case you will only need to set the PC address to the same subnet as the router and panel. This will facilitate applet operation and table configuration. The following default IP addresses (below) ship from the factory. The numbers will be consecutive in the case of multiple panels; i.e., .182, 183, etc.

**Routers - 192.168.5.180**

**Panel - 192.168.5.181**

## Network Configuration

---

To change the devices to use non default addresses, see *New Configuration on an Existing Network* (next). Also note, the PC and devices (router and panel) must occupy the same subnet.<sup>1</sup> See your network administrator for configuration assistance if no default subnet appears.

*Online instruction is also available by accessing the HTML help file located within the applets, which will also provide details for setup and configuration of the router and panel tables.*

---

1. All routers and panels require separate IP addresses.



## New Configuration on an Existing Network

This procedure describes new configuration on an existing network. Use this routine if you need to modify the router or panel's network parameters. The steps below are based on the default set of parameters.

On the PC, click Control Panel, Network and Internet, Network Sharing Center, then Change Adapter Settings.<sup>1</sup>

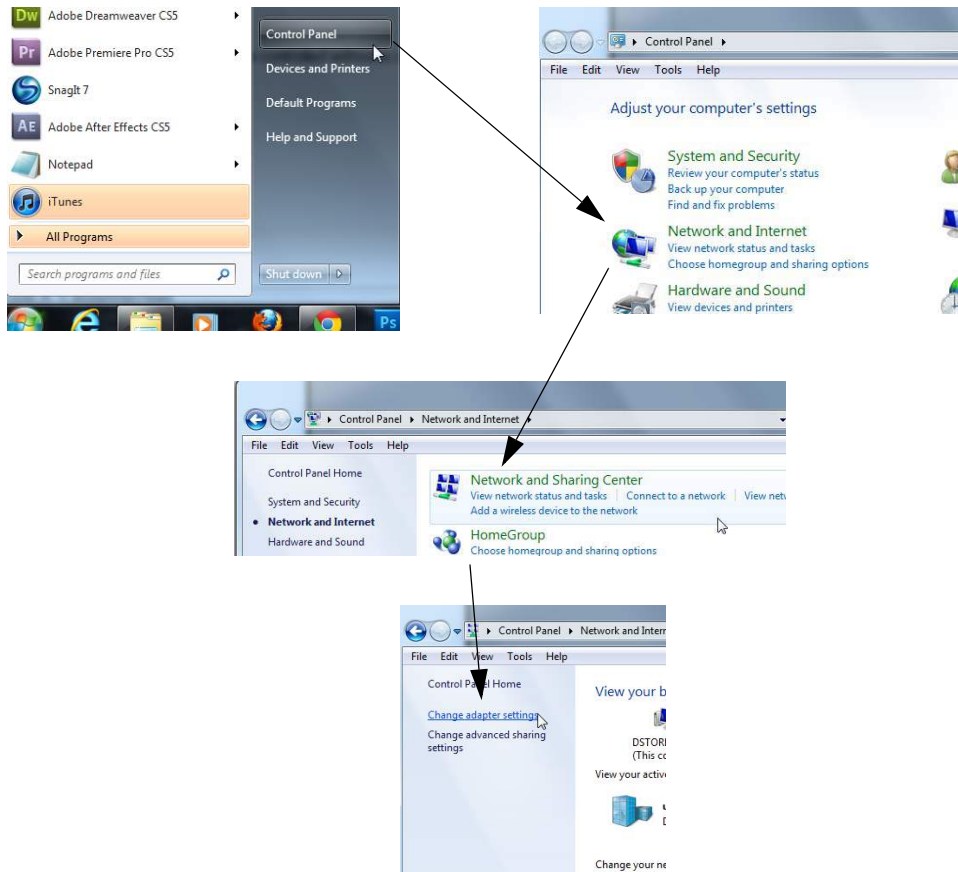


FIGURE 2.

1. These steps are based on Windows 7 operation.

When the following window appears, right-click the icon to produce the drop-down menu, then select *Properties*.

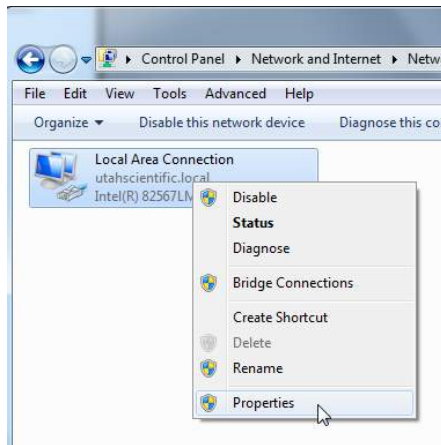


FIGURE 3.

The following window will appear.

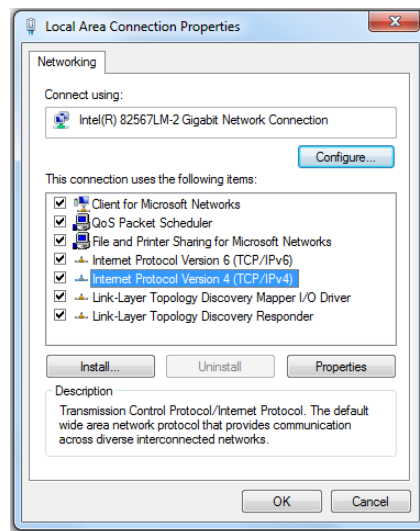


FIGURE 4.



Select Internet Protocol Version 4, then click the Properties button. The following window will appear.

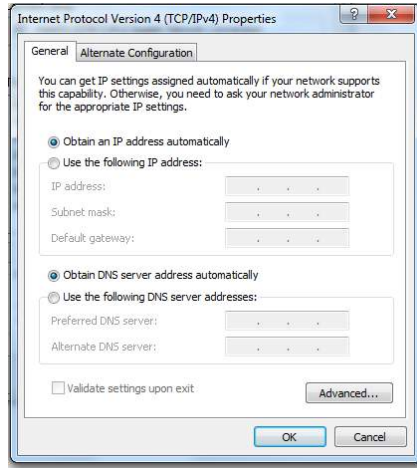


FIGURE 5.

Click the second radio button down to set a static IP address.


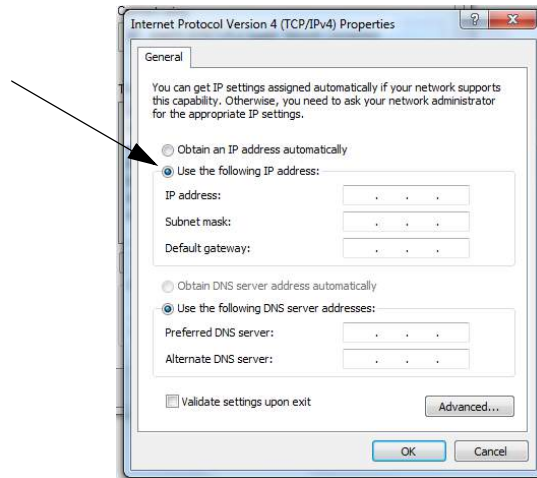


FIGURE 6.

Enter the following address into the indicated cell (192.168.5.2)<sup>1</sup>

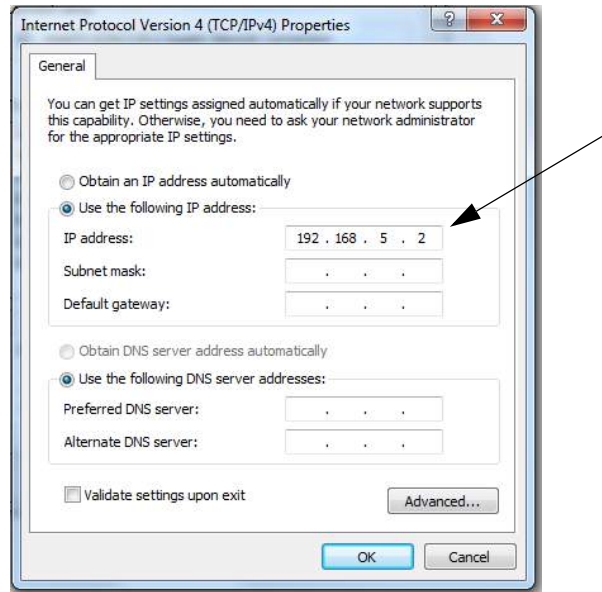

**FIGURE 7.**

Accept the Subnet mask default, then click OK.

Now connect your PC or laptop to the router with a standard Ethernet cable.

**Note:** *A crossover cable (typically used with an Ethernet connection) is not necessary as the signal 'switch' is done internally.*

---

1. This is the subnet default address. You can substitute the last digit if required for your system. If your system contains a completely different subnet for the PC, routers, and panels, substitute the correct addresses where applicable.



## Router Applet Activation and Configuration

Launch your preferred browser and complete the following steps:<sup>1</sup>

- a. Log into the Router Applet by entering 192.168.5.180 into your browser's URL line (default). If your router is using a different address than the default, enter it into the browser.

*NOTE: If the applet does not activate, try pinging the system by opening your command prompt and typing the router's IP address (address number ending in .180) to determine whether or not the connection is good. If you are unable to ping the device, check the connections or see the network administrator for additional help.*

*In addition, if you are unsure of the IP address, you may need to default the router to the factory IP address of 192.168.5.180.*

- b. Accept the following advisory (checkbox) then click Run to continue


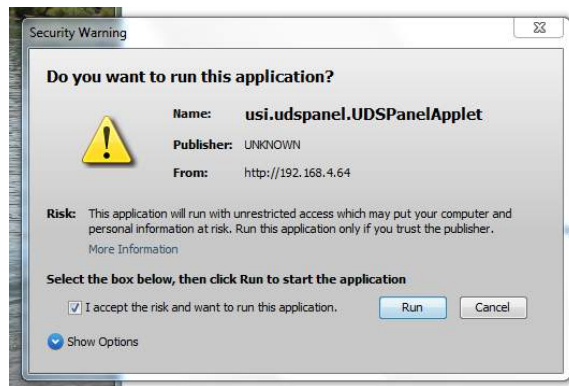


FIGURE 8.

---

1. IMPORTANT: You must use Java version 7 or later.

- c. When the Router icons appears, select “Router Configuration”.

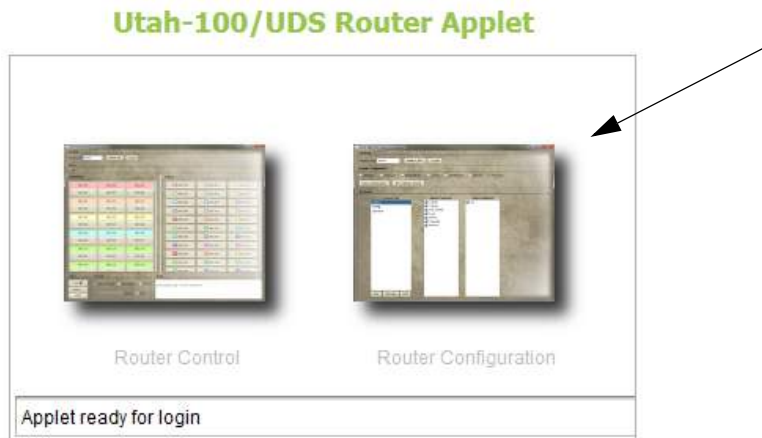

**FIGURE 9.**

*Note: You will only be able to connect if the browser window (shown in Figure 9) indicates “Applet ready for login.”*

- d. Enter Username “admin” (default) - *in the username entry box*



- e. Enter Password “admin” (default) - *in the password entry box*



- f. Click the Data Comm (radio button) to change the network configuration.

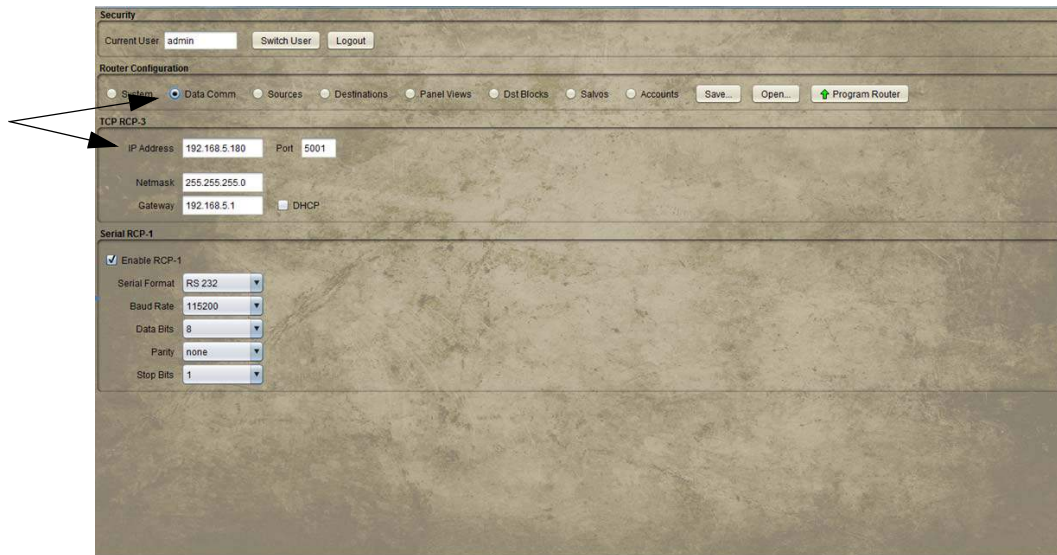


FIGURE 10.

**Note:** The program will display the router’s IP address (IP Address cell, above). It is important however that Net mask and Gateway remain constant among all devices, and to keep the DHCP box unchecked.

- g. Enter the desired IP address in the space provided.
- h. Verify the Port setting of 5001.
- i. Make sure the DHCP box is unchecked.
- j. Click the “Program Router” button when the network configuration is complete.
- k. A dialog will appear prompting you to reset the device. To make the IP changes active, reset the router by pressing (and quickly releasing) the small button at the far right side of the control module on the back of the router.

*Note:* There is no need to restart the browser when the router is reset.

Once the above steps are complete, the router can be placed on the target network and configured as needed.

## Panel Applet Activation and Configuration

Make sure the panel is plugged into the same network as the PC, and that the PC is set to the same subnet as the panel. This procedure allows the configuration from the Panel Applet in the absence of a physical router connection.

Log into the Panel Applet first by bringing up a web browser and entering 192.168.5.181 (factory default setting) in the URL browser box. Click the Panel Configuration icon to log in, as shown in the figure below.

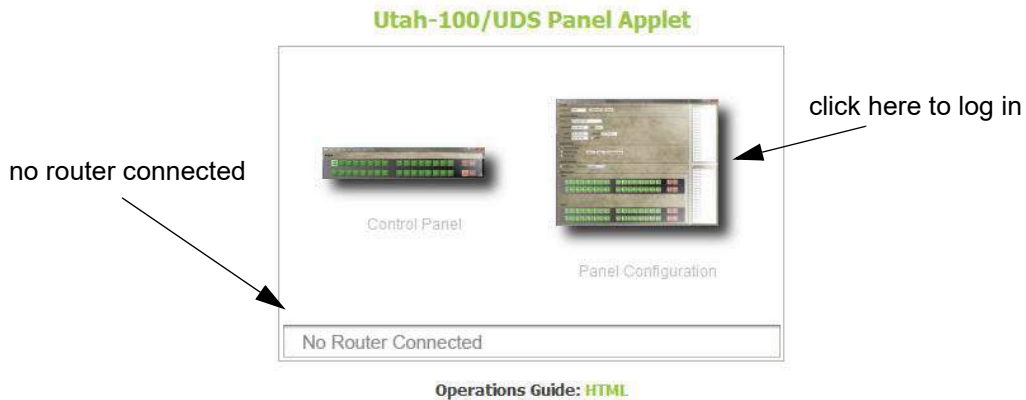


FIGURE 11.

In this mode, the Panel Applet dialog will indicate the router's absence.<sup>1</sup>  
The following dialog will appear (with no router connected).



FIGURE 12.

---

1. This is a simple operational scenario with no router currently connected. You will be taken directly to the Configuration screen when the router and panel are simultaneously connected.





Since there is no router connected, click Cancel to dismiss this dialog.

The following window will appear, which will give you an opportunity to designate the necessary configuration detail.

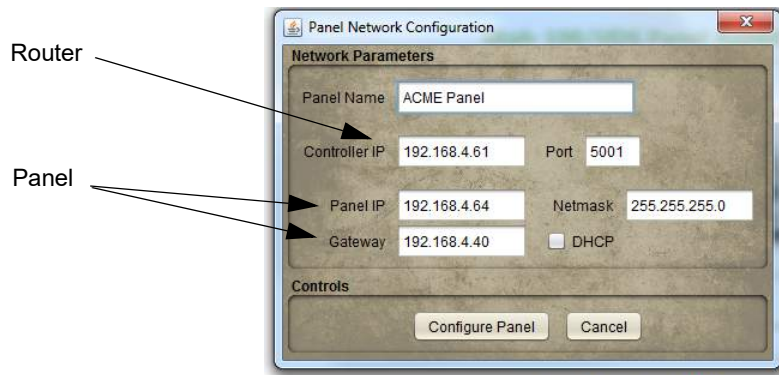


FIGURE 13.

The above illustration contains a default IP address (your address may be different). The Controller IP corresponds to the router address, while the Panel IP and Gateway are associated with the panel that you are using. Enter the correct addresses as needed.

Click **Configure Panel** when the correct addresses are in place, then reset the system.

A dialog will appear prompting you to reset the device. To make the IP changes active, cycle the power to the panel or reset the panel by pressing (and quickly releasing) the small button at the far right side of the control module (rear of panel).

Once the above steps are complete, the panel can be placed on the target network and configured as needed.

You can now log in to the router and panel applets to configure you system as needed using the newly configured IP addresses. The default username and password is **admin**, in both cases. Once you have logged in, click the configuration icons to activate the configuration dialogs.

For additional assistance, please contact Utah Scientific Customer Service - 1(800) 447-7204.





## Section 3

### UTAH-100/UDS Browser Utility

# The Router Applet

#### Router Configuration

Router Configuration is activated by launching the browser applet (using the supplied default IP address). This section contains the steps involved in activation and operation of the UTAH-100/UDS Router Applet.

## The Router Applet

---

The Router applet must be connected to the actual router to communicate properly. Once the necessary hardware is in place, start the application with the provided IP address, then launch the applet by clicking the Router Configuration icon.

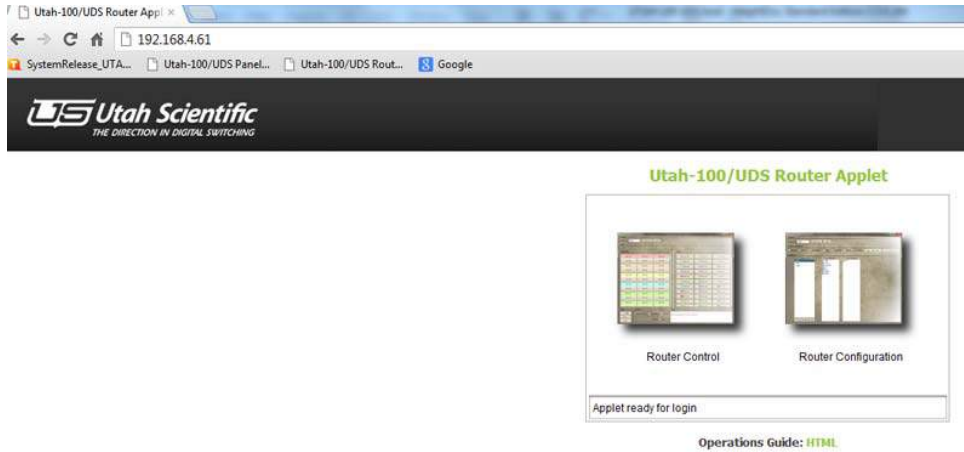


Figure 3-1.

You will be prompted to log in with your username and password. The default is admin/admin).



Figure 3-2.

This will activate the setup window. During a successful login, all associated accounts are loaded into the system at the time of the initial launch (*Current User*).



Figure 3-3.

### Security

The default user is listed in the 'Current User' cell. You can change users from the list of previously designated users (Switch User button). Users are *selected* from this dialog but not configured.

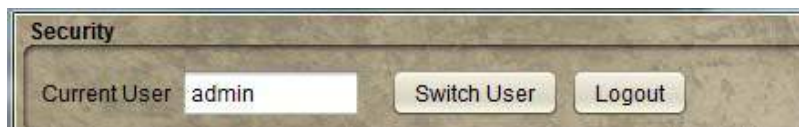


Figure 3-4.

## Data Comm

### TCP RCP-3 (Network)

This dialog is used to set Device Communications parameters. Network IP address, netmask, and gateway parameters are edited at this location along with the RCP-3 port setting. Alternatively, you can select DHCP to automatically set network parameters. The only way to verify the IP address setting in DHCP mode is to access the DHCP server.




The screenshot shows the 'TCP RCP-3' dialog box with the following settings:

IP Address	192.168.4.61	Port	5001
Netmask	255.255.255.0		
Gateway	192.168.4.40	<input type="checkbox"/>	DHCP

Figure 3-5.

### Serial RCP-1

This area allows for enabling or disabling RCP-1 (checkbox) and assigning the parameters associated with serial format, baud rate, data bits, parity, and stop bits.



The screenshot shows the 'Serial RCP-1' dialog box with the following settings:

<input checked="" type="checkbox"/>	Enable RCP-1
Serial Format	RS 232
Baud Rate	115200
Data Bits	8
Parity	none
Stop Bits	1

Figure 3-6.



### DHCP

In certain circumstances the default IP address is unusable and DHCP connectivity is expected. Click the DHCP box to activate the connection. The address cells will gray out when the box is clicked. The only way to verify the IP address setting in this mode is to monitor the DHCP server via serial connection.

Once network modifications are complete (IP changes), click the **Program Router** button.

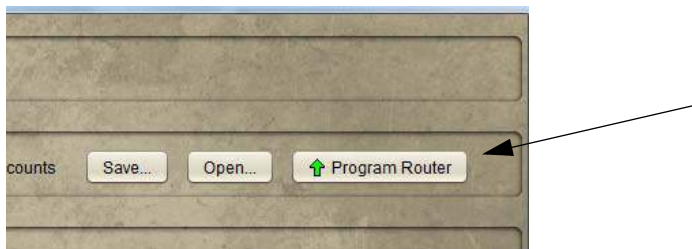


Figure 3-7.

The 'configuration successful' dialog will appear.



Figure 3-8.

## Sources

The program defaults with all sources configured. Since this is not the likely desired configuration, highlight the unwanted sources and click the Remove button.

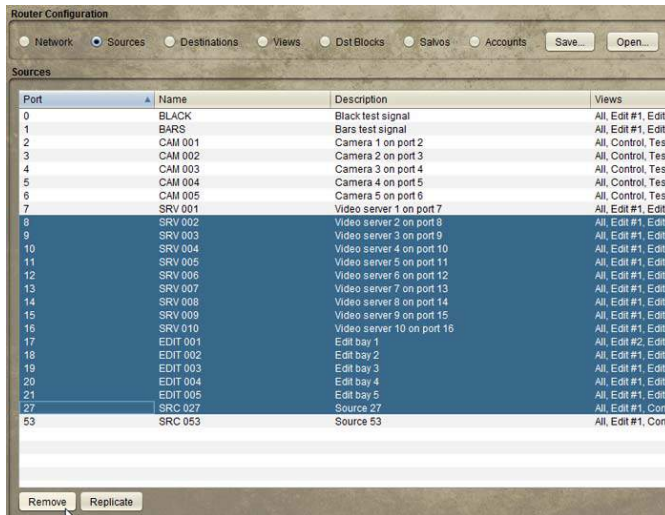


Figure 3-9.

## Source Creation

New Sources are defined and added by clicking the Replicate button.

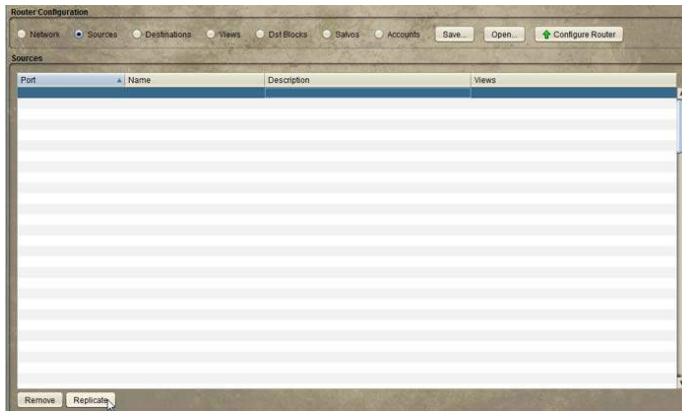


Figure 3-10.

Also, the Source table can be sorted by clicking on the desired column header.





In this example, the prefix is the three character descriptor for camera. Numeric suffix start is the 3 digit end definer associated with the device. Increment, and starting port number are all assigned as number '1'. The Description is a long form identifier, with 'suffix' placed inside 'less than' and 'greater than' symbols to allow the system to properly increment the devices in the listing. 'All' views are selected, and the number of devices requested for the list count is '5'.

Figure 3-11.

The resulting list display is illustrated below.

Port	Name	Description	Views
1	CAM 001	camera 1	All
2	CAM 002	camera 2	All
3	CAM 003	camera 3	All
4	CAM 004	camera 4	All
5	CAM 005	camera 5	All

Figure 3-12.

### Source creation from within the list

Highlight the line and enter the definitions for Port, Name, and Description.

Port	Name	Description	Views
1	CAM 001	camera 1	All
2	CAM 002	camera 2	All
3	CAM 003	camera 3	All
4	CAM 004	camera 4	All
5	CAM 005	camera 5	All
16	SRV 001	Server 1	

Figure 3-13.

Using this option to add Sources will not allow you to manually enter the View method. Click the View radio button to make this modification.



Figure 3-14.

Click the checkbox associated with the new Source, then highlight the desired view type within the View list.

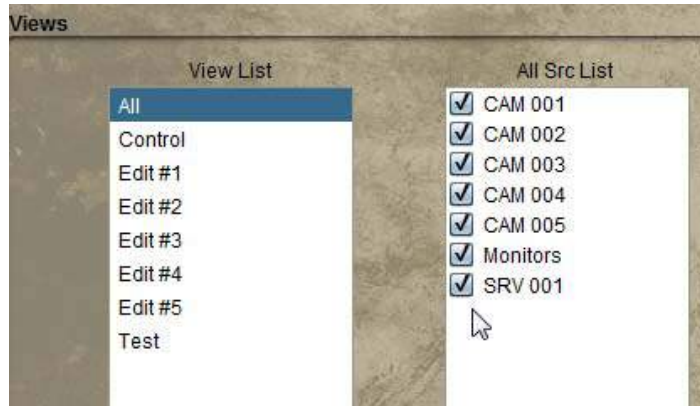


Figure 3-15.



Your new view will be associated when you return to the Sources window.

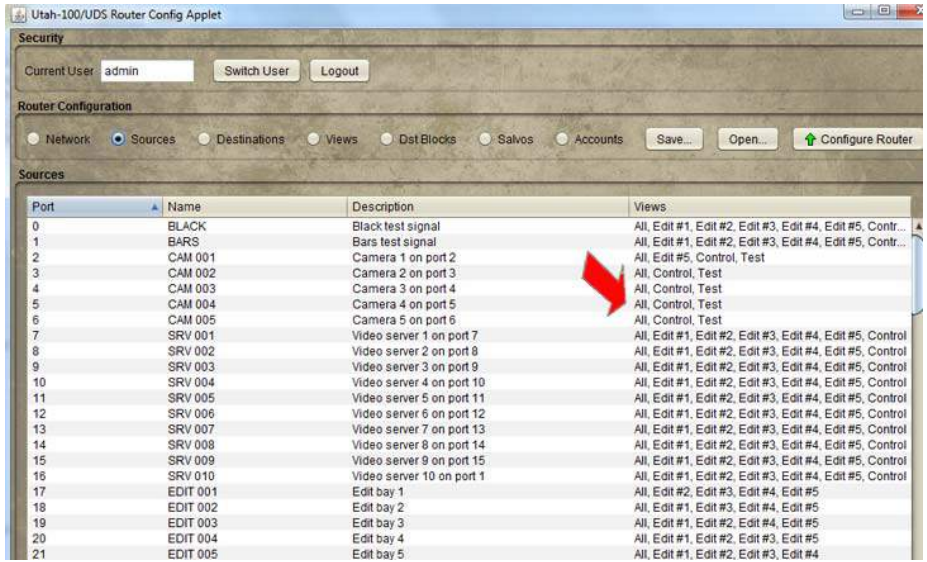


Figure 3-16.

## Destinations

The program defaults with all destinations configured. Since this is not the likely desired configuration, highlight the unwanted sources and click the Remove button.

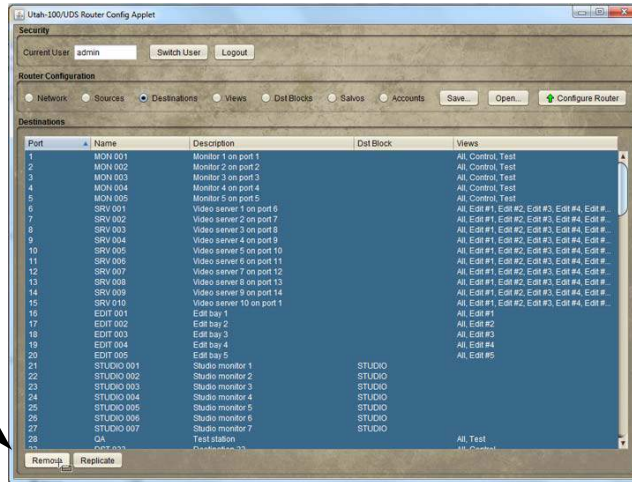


Figure 3-17.

## Destination creation

New Destinations are defined and added by clicking the Replicate button, or by entering data in the table directly. In addition, the Destination table can be sorted by clicking the desired column header.

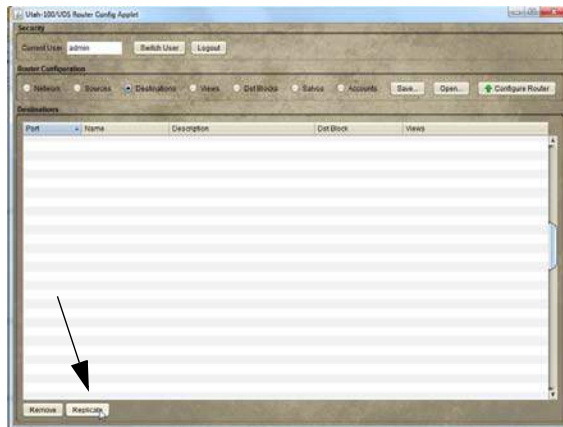


Figure 3-18.



In this example, the prefix is the three character descriptor for camera. Numeric suffix start is the 3 digit end definer associated with the device. Increment, and starting port number are all assigned as number '1'. The Description is a long form identifier, with 'suffix' placed inside 'less than' and 'greater than' symbols to allow the system to properly increment the devices in the listing. 'All' views are selected, and the number of devices requested for the list count is '5'.

Replicate Destinations

Name

Prefix: CON

Numeric suffix start: 001 Increment: 1

Port

Starting port number: 1 Increment: 1

Description

Description: control<suffix>

Views

All  Control

Edit #1  Edit #2

Edit #3  Edit #4

Edit #5  Test

Destination Block (optional)

Count: 5

Replicate Cancel

Figure 3-19.

The resulting list display is illustrated below.

Utah-100/UDS Router Config Applet

Security

Current User: admin

Router Configuration

Network Sources Destinations Views Dst Blocks Salvos Accounts Save... Open... Configure Router


Port	Name	Description	Dst Block	Views
1	CON 001	control1		All
2	CON 002	control2		All
3	CON 003	control3		All
4	CON 004	control4		All
5	CON 005	control5		All

Remove Replicate

Figure 3-20.

### ***Destination Creation from Within the List***

Highlight the line and enter the definitions for Port, Name, and Description.

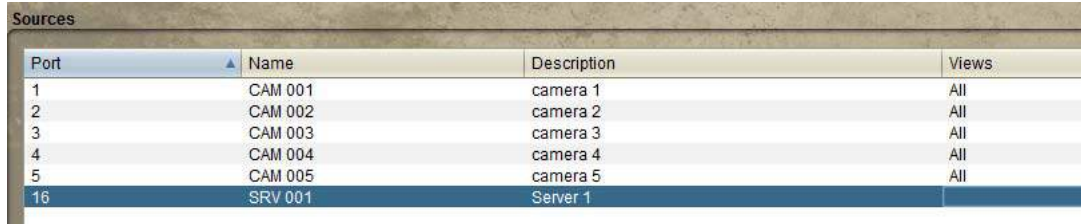

Port	Name	Description	Views
1	CAM 001	camera 1	All
2	CAM 002	camera 2	All
3	CAM 003	camera 3	All
4	CAM 004	camera 4	All
5	CAM 005	camera 5	All
16	SRV 001	Server 1	

Figure 3-21.

Do this to overwrite the lines contents when the cursor becomes active.


Using this option to add Destinations will not allow you to manually enter the View method. Click the View radio button to make additional modifications.



Figure 3-22.



Click the checkbox associated with the new Destination, then highlight the desired view type within the View list.

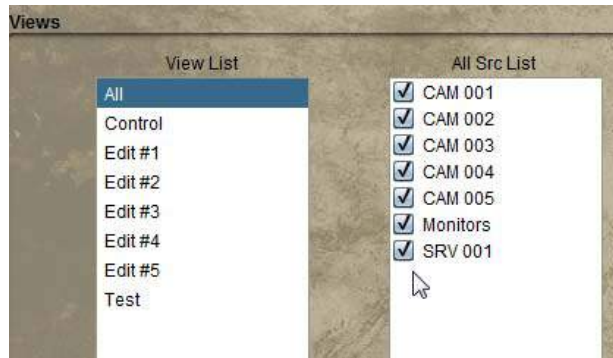

Port	Name	Description	Dst Block	Views
1	CON 001	control1		All
2	CON 002	control2		All
3	CON 003	control3		All
4	CON 004	control4		All
5	CON 005	control5		All, Edit #5
10	EDT 001	Edit 1		Edit #5, Control

Figure 3-23.

You can also click the Destinations radio button and 'Replicate' in the same manner as with Sources. This involves adding Destinations to the list in the correct sequence.

The Replicate dialog window contains a pop down menu at the bottom, which will contain any previously created Destination blocks.

Click the **Configure Router** button when the needed destination blocks have been created.

## Panel Views

### Organizing

The *Views* selection is a way to organize Sources and Destinations into manageable groups for the router control window. Views will appear within the Source and Destination lists immediately after editing.

To facilitate this, click the *Panel Views* radio button, select the desired View from the list on the left, then click the checkboxes within the next two devices you would like associated with the View.

You can also create a whole new view by clicking the **Add** button at the bottom of the left-hand list.

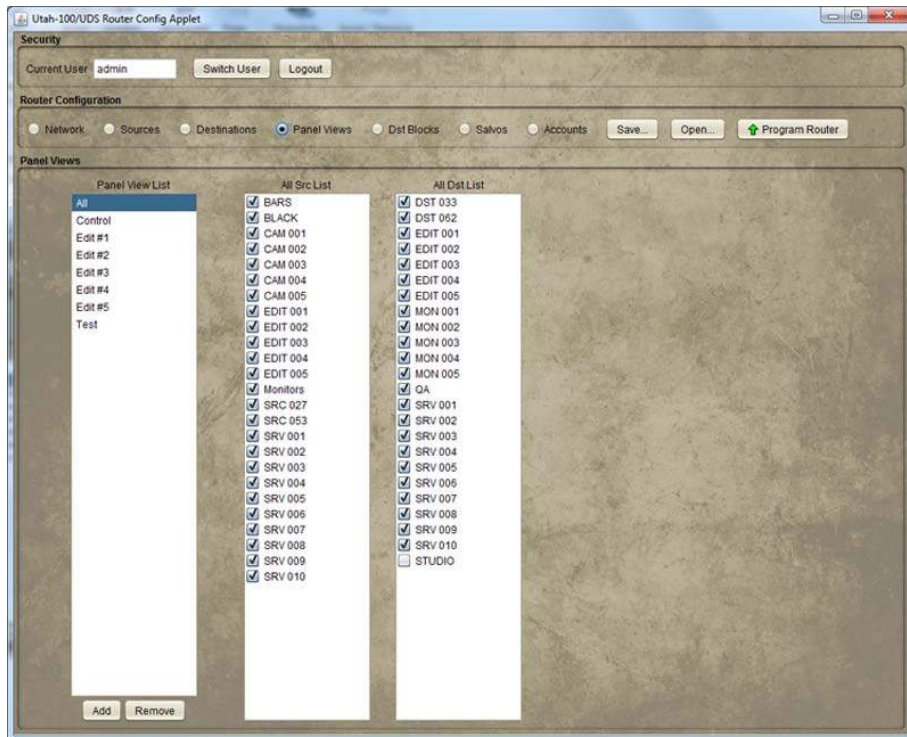


Figure 3-24.






### Sorting Option

With **Panel Views** selected, the *Sorting Option* is a way to organize Sources and Destinations into display lists (*Router Control* applet) based on a router or alphabetic port designation.

To access the sorting option, click the Panel Views radio button, the parameters you would like to sort within, then indicate the *All Sort Order* (Alpha or Router) and click the **Program** button.

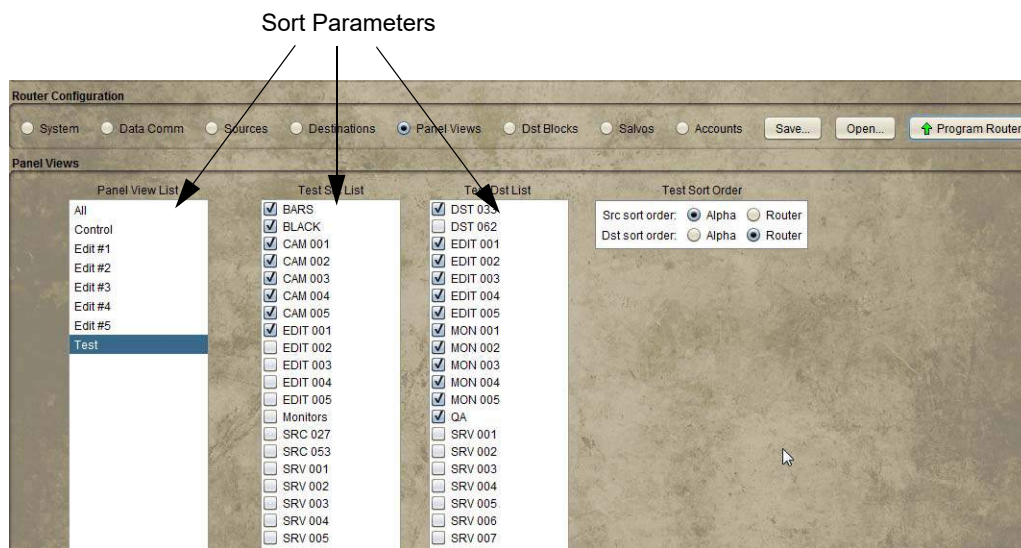

## Router Sort

This is an example of the display that will appear within the Router Control Applet when Router Sort is indicated (Config Applet). Sorting is completed by *router port*.

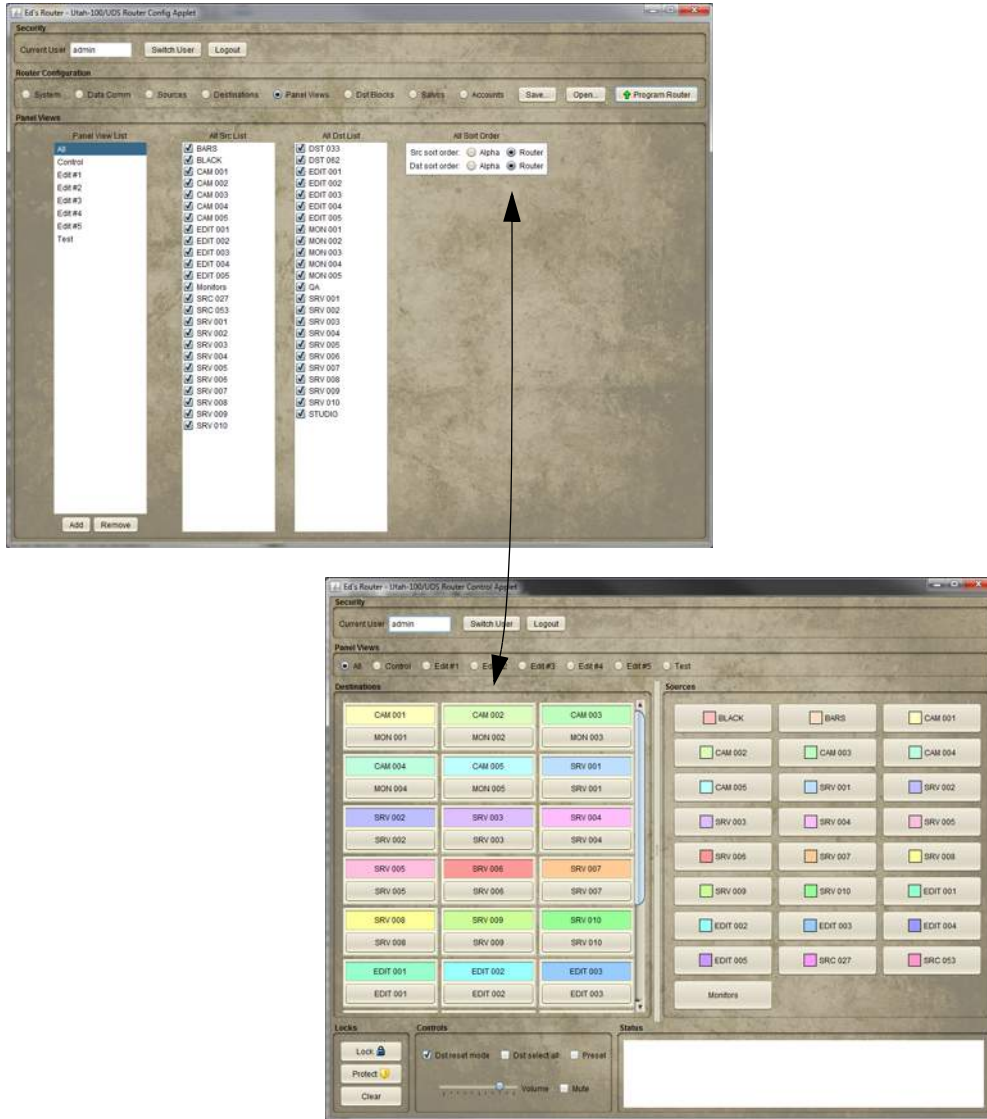


Figure 3-25. Router Sort



### Alpha Sort

And this is an example of the display that will appear within the Router Control Applet when Alpha Sort is indicated (Config Applet). Sorting is completed by *alpha numeric port*.


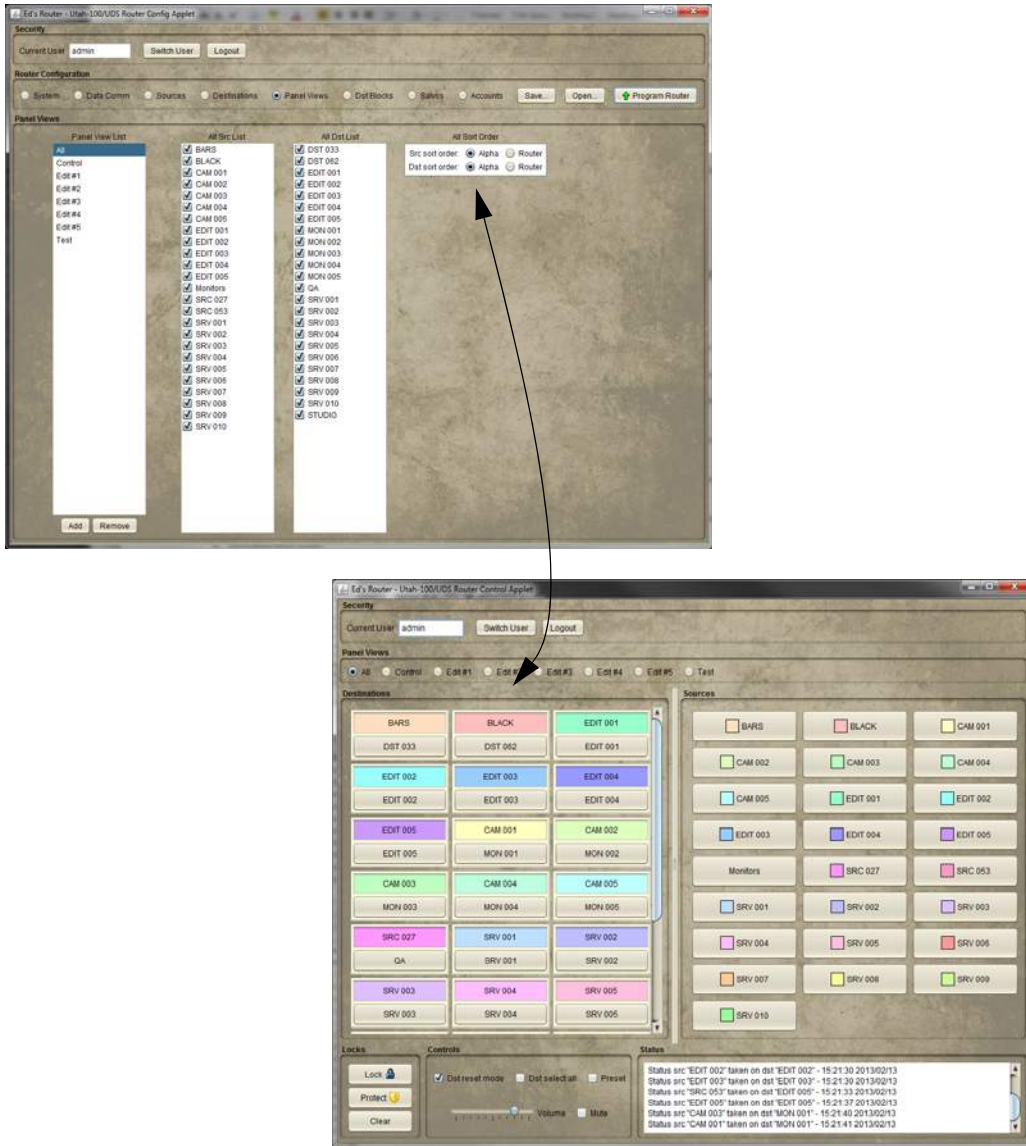


Figure 3-26. Alpha Sort

### **Destination Blocks**

The Destination Block is essentially a way to assign a destination grouping as a DA. Any pre-configured destination blocks will display in the drop down list inside this dialog window. This saves time by assigning an entire group, or block at once.

Click the Dst Block checkbox to activate this feature. Provide a name when the dialog appears.

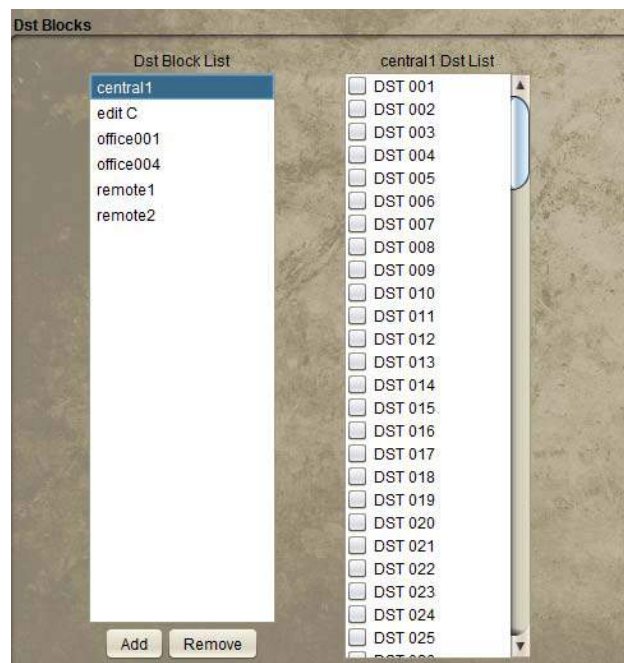

**Figure 3-27.**

The block will appear as one single destination in the system when a destination block is created. The new name will appear within the left listing and the options (to include) will appear within the right listing.

When Takes are made on the DA block, the take source will be immediately switched up to all of the destinations in the block.

The router will report the total number of takes corresponding to the number of replicated destinations whenever takes are made on the DA block.

**Note:** *Destinations assigned to specific Destination Blocks cannot be assigned to additional Destination Blocks. A dialog will appear, asking if you wish to reassign, in the event this is attempted.*



### Salvos

The Salvo is a mechanism for storing multiple takes to be conveniently triggered at a later time. Salvos will appear as new sources in the system and will trigger the configured takes when selected.

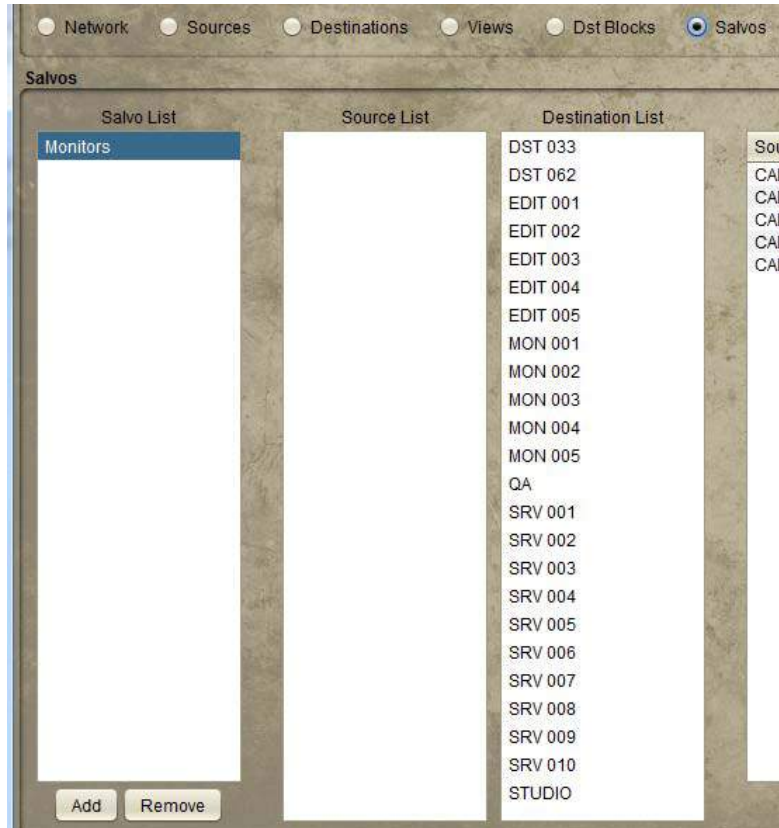


Figure 3-28.

Select the desired Source and Destination from the lists, then click the “Add” button to place the new Salvo to the listing on the right.

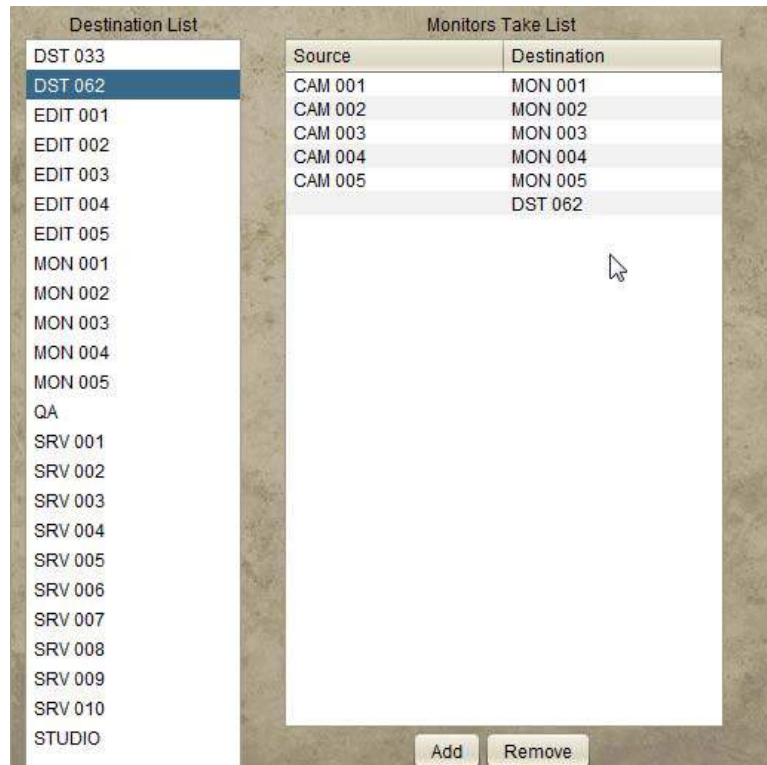


Figure 3-29.



You can now verify your new Salvo by accessing the View dialog area (View radio button). Note that a new Source is listed within the corresponding column.

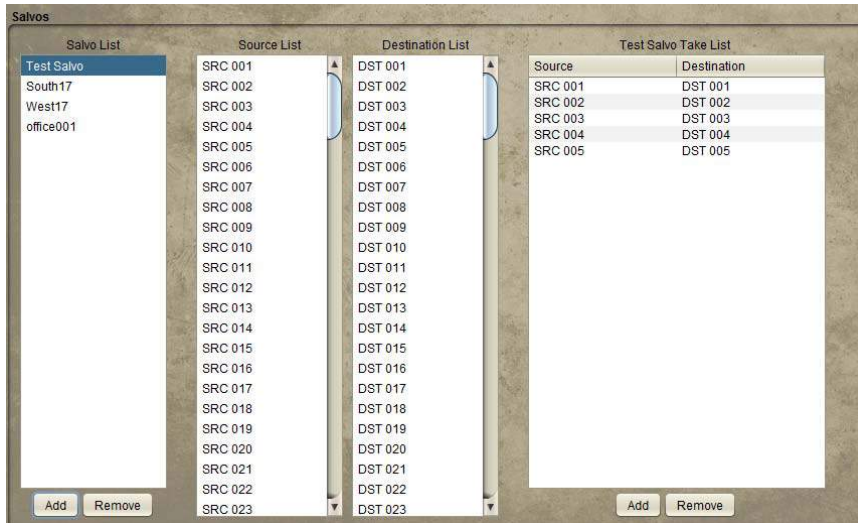


Figure 3-30.

Your new Salvo will also be displayed inside the Router Control applet.

## Accounts

The 'UDS System' defaults with 3 pre-defined use accounts. You can edit the passwords, modify, delete, or add accounts as needed for your operation.

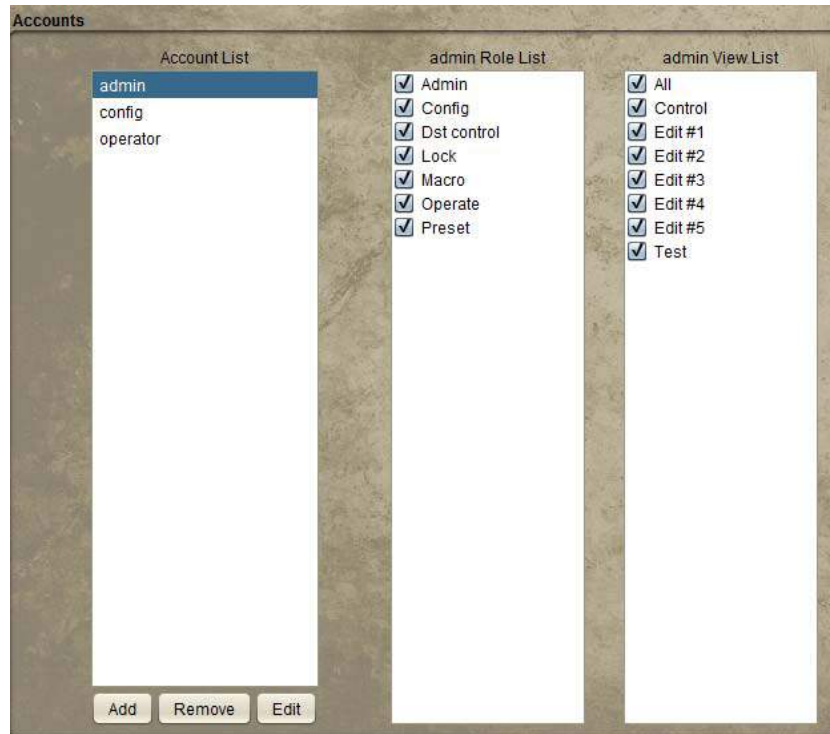


Figure 3-31.

- Roles allow permissions for various system attributes; the actual creation, modification, or deletion of accounts (admin).
- Config allows router and panel configuration. Dst control allows for control over the Dst reset and Dst select all checkboxes (Router Control area).
- Lock gives the associated account control over actual lock status.
- Macro allows macro editing while in preset mode.
- Operate controls the ability to make Takes.





- Preset controls the ability to turn preset on or off; Preset ON allows constant preset activation if needed.


Views to be associated with given accounts are defined by the checkboxes in the admin View List. While all layouts are available to any user for status view, destination selection and the ability to make takes are defined within this listing.




Figure 3-32.

### Save Button

The router configuration is saved to a file on your computer. If you want to save the current state of the router connections, make sure the corresponding check box is indicated within the Router Configuration dialog window (right side).

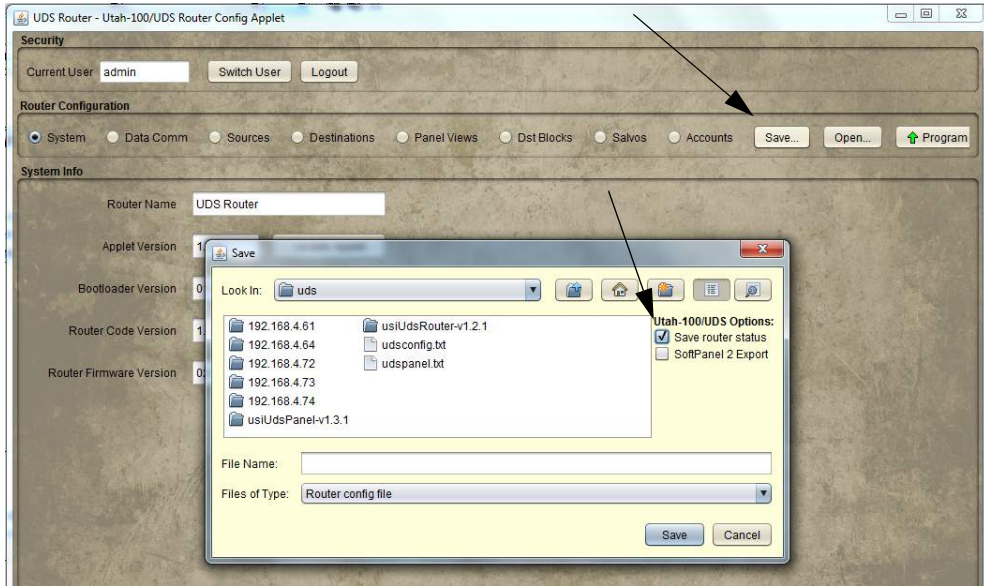

**Note:** When you program the router (Program Router button), a warning dialog will appear indicating that the current configuration 'Contains Router Status - Do you wish to Switch the Router?'

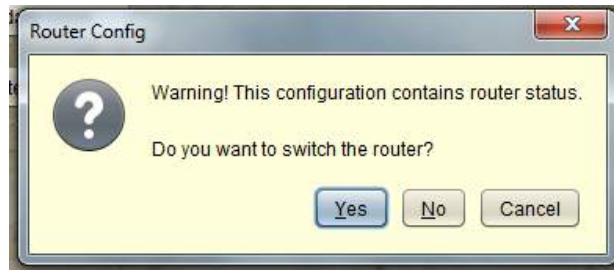

Clicking 'No' indicates the configuration will be saved without the Router.  
Clicking 'Yes' indicates the configuration is saved and the Router Outputs will be stored.

## Router Control

### Source and Destination Management

Destination buttons are contained on the left side of the display, with the Source status indicated above each button.

The Control panel layout (illustrated below) will follow your own panel configuration. Destinations are selected on the left side of the display by clicking the labeled button, then the intended Source is selected (clicked) on the right side of the display.

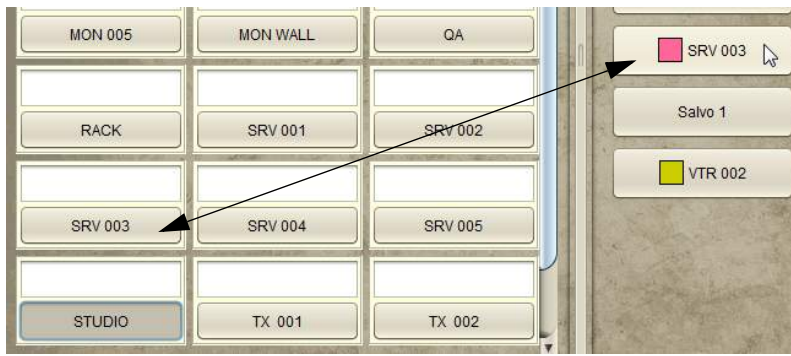


Figure 3-33.

When you select a Destination and make a Take, the Destinations will automatically reset if the checkbox below is set.

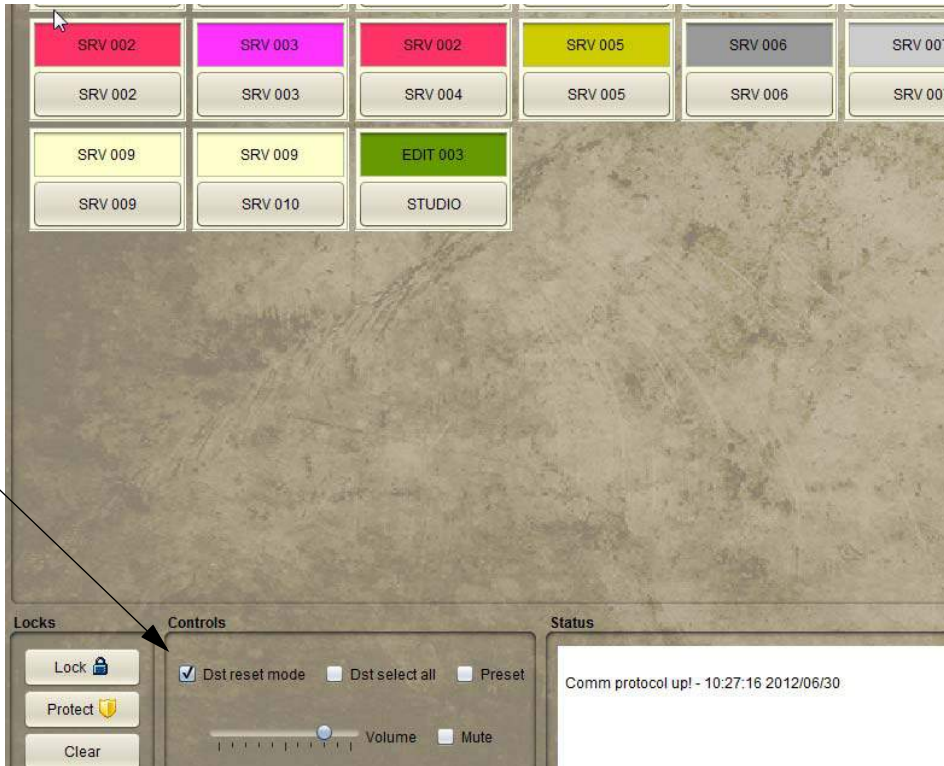


Figure 3-34.

Otherwise the Destinations will remain selected allowing you to make multiple takes on the same Destinations without having to re-select each one.



Destinations can be locked or protected by clicking the corresponding buttons within the lower-left of the display.

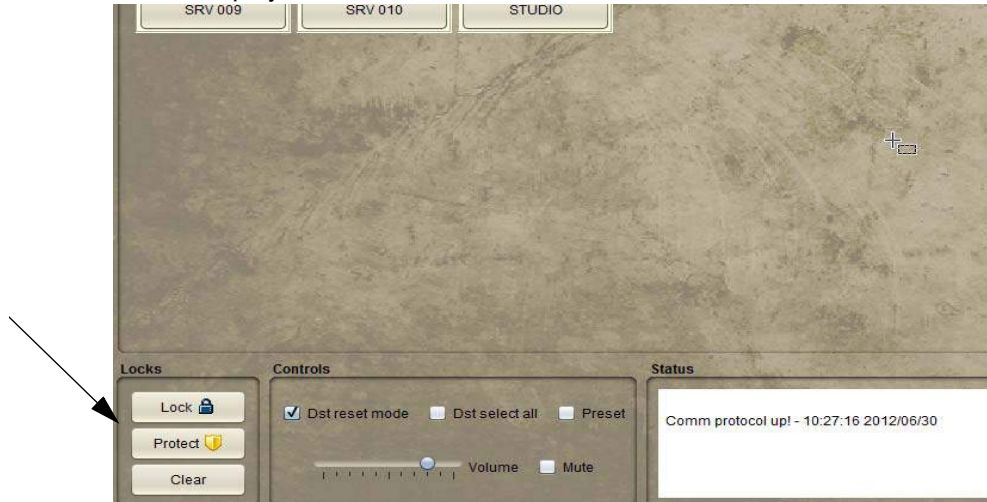


Figure 3-35.

Takes can still be made on Destinations in Protect mode locally, while remote users will not have access to protected Destinations. Locked Destinations are not switchable by anyone until the lock is actually cleared.

The status window (lower right above) will display all Controller activity.

### **Preset (checkbox)**

If the Preset box is checked (Controls group area), the 'Take' button (lower right) will blink, waiting for the user to activate the take by a button click.

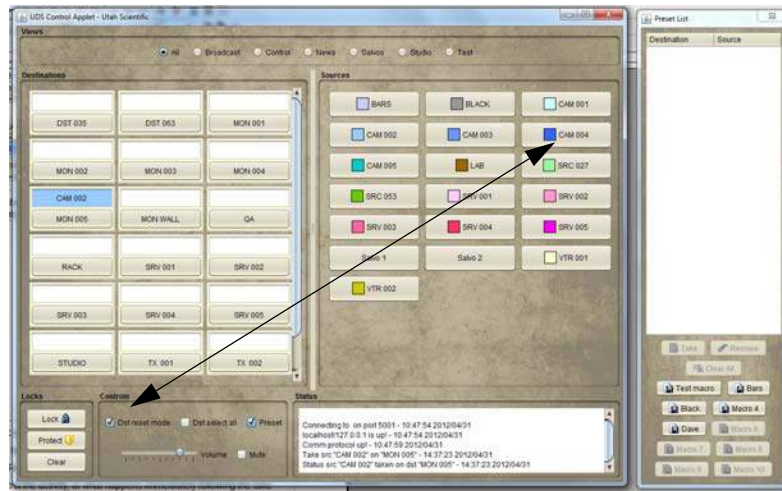



Figure 3-36.

The 'status' will alternate between what currently exists, and what the action will be once the Take commences.

Takes will occur immediately if the Preset box is not checked.

When this window is active all actions will be directed to the preset list (right side list window), rather than immediately affecting the router.

All UDS Control activity is logged in the Status box in the lower right portion of the display.

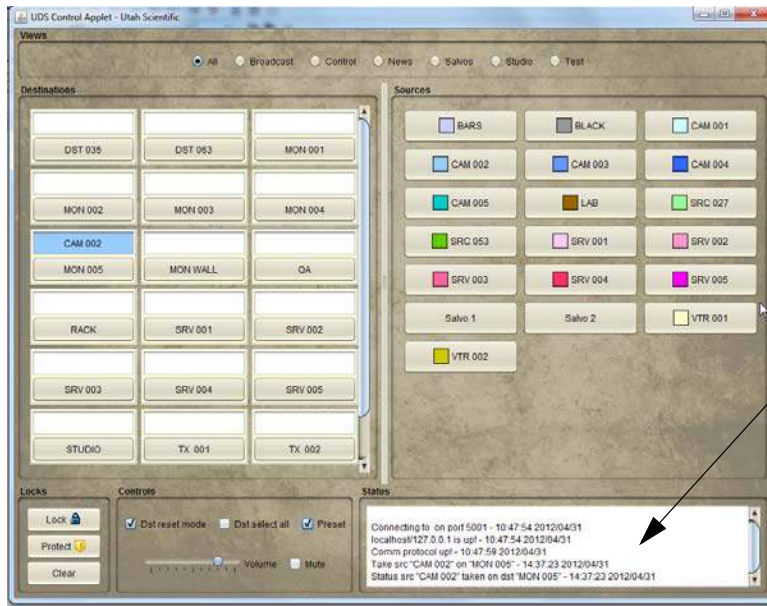

**Figure 3-37.**

### **Changing the Button Color Scheme**

Changing the Source button color schemes is useful for designating status colors for different equipment sets. Right-click on a Source button to produce a color picker window.

Use the **Auto** button to [ask the system to] uniquely color all Source buttons. This is useful when original button colors are needed quickly. (A prompting dialog will appear before all buttons are colored.)

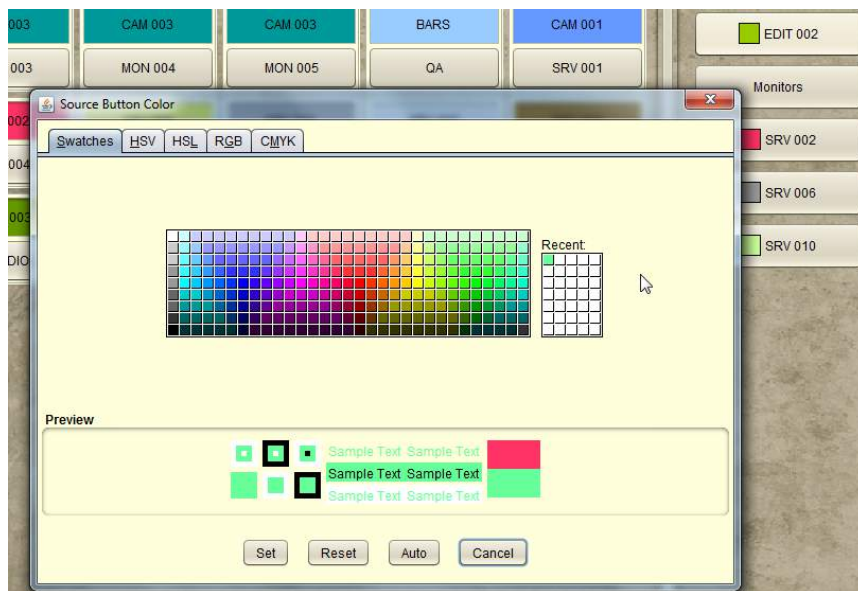


Figure 3-38.

Use the **Auto** button to [ask the system to] uniquely color all Source buttons. This is useful when original button colors are needed quickly. (A prompting dialog will appear before all buttons are colored.)





### Destination Reset Mode (checkbox)

The Destination Reset Mode checkbox (Dst reset mode) will control the activity, or what happens immediately following the take. Specifically, when checked, the Destination button itself is no longer selected (or highlighted) after the Take is made. If not checked, the Destination button will remain selected after the Take is made. This feature allows the user to continually make new selections and takes on the same button without having to reset the button each time.

*When the box is checked, you will need to select (or highlight) the Destination on every instance prior to making a new Source indication. When the box is unchecked you can continually make new Source selections without having to re-highlight the Destination button (box) each time.*

### Multiple Destination Selection

You can select (or highlight) multiple Destination buttons, then select a Source to simultaneously affect all selected destinations.

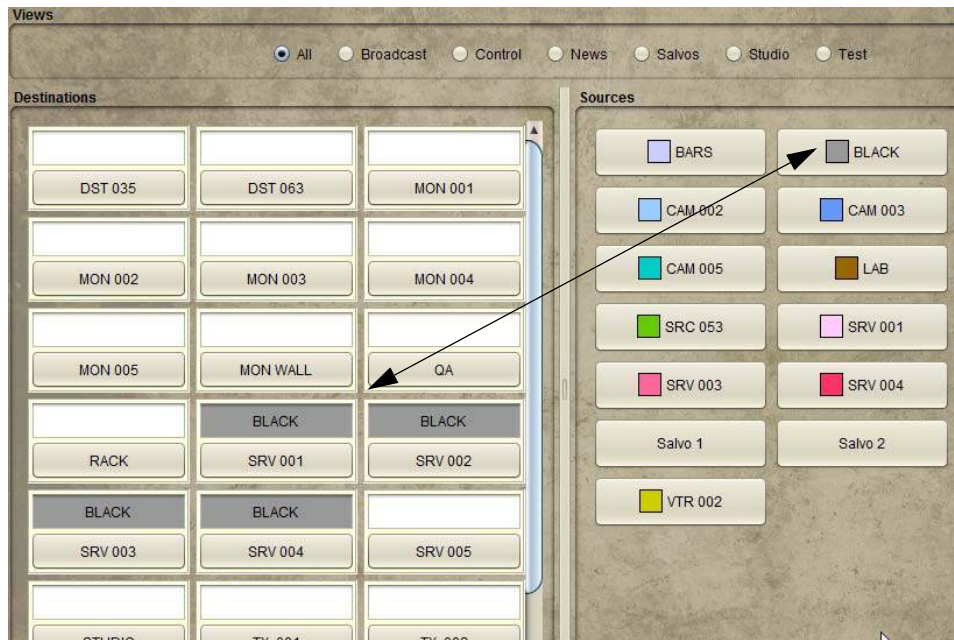


Figure 3-39.

### Audio

Take status is indicated by the audio control at the bottom of the display. If the Mute box is unchecked, takes are heard and controlled with the corresponding audio slider bar.

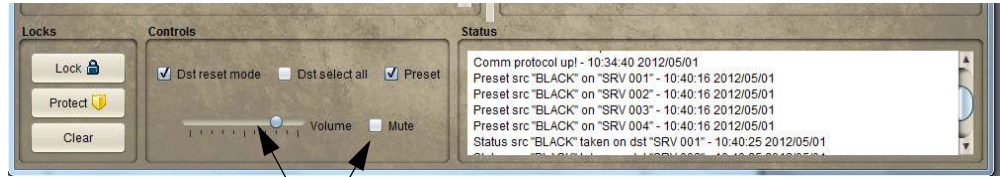


Figure 3-40.

### Macro buttons

A series of Takes can be saved as a Macro while in the Preset mode. Macros work like Salvos, but are saved to the PC where they are configured and cannot be used system wide. To save a Macro, right click on the Macro switch and select **Save**.

The Macro buttons allow you to save the take action prior to the actual take being made. Macros can be customized by name, or edited as needed. Macros work on a local basis at each control station.

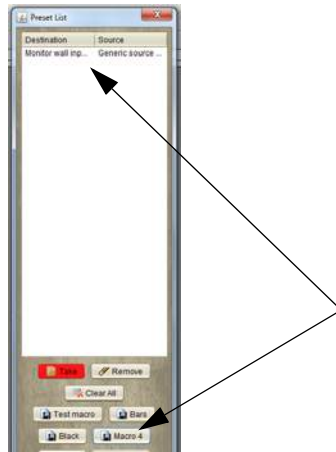


Figure 3-41.




Macros are saved in the listing, or renamed by clicking the selection at the bottom of the pop up window.



Figure 3-42.

## Salvos

The Salvo buttons inside the Sources group area allow you to activate Takes on multiple Destinations. As an example, one Salvo button may control multiple Destinations with pre-configured Sources for each salvo destination.

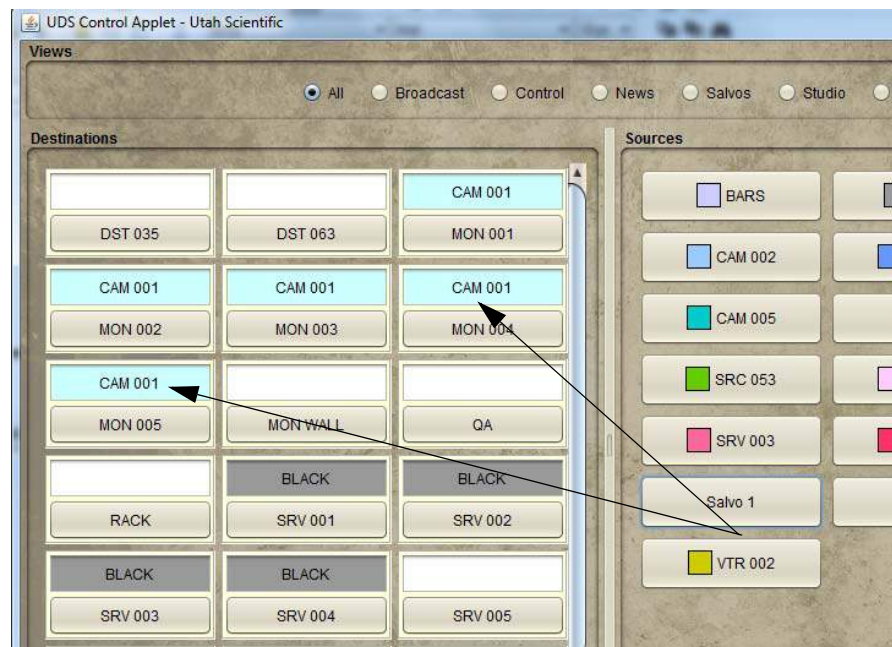

**Figure 3-43.**

*Salvos are set up on a system-wide basis with the configuration window.*



### Preset List Window

The waiting takes will be listed within the display once a Destination and Source have been selected.

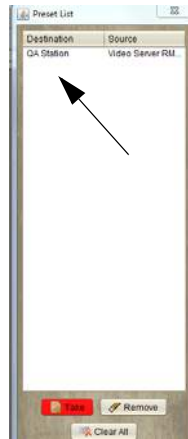


Figure 3-44.

*Please continue on to the next section, Hardware Based Control Panel Configuration and Operation, for UDS panel setup and maintenance detail.*





## Section 4

# The Control Applet

### Introduction

As discussed in Section 3, the UTAH-100/UDS can be controlled and monitored using a virtual control via a built-in web interface, or external hardware control panel via Ethernet. This section describes the setup, configuration and operation of the optional external control panel.

## The UTAH-100/UDS CP

The external hardware control panel and virtual control via Ethernet extends the functionality of the system to local and remote users as necessary.

### Front View



Figure 4-1.

### Rear View



Figure 4-2.

## Setup

Use the following steps to install the Utah-100/UDS Systems into the rack frames:

1. Determine the vertical layout of your frames before you begin the installation.
2. Once your layout is determined, install the Utah-100/UDS chassis' in the 19" rack frame.
3. Connect the Ethernet cable for network communications.





## Panel Configuration

Panel Configuration is activated by launching a web browser and entering the panel's IP address as the URL. The panel must be connected to the network in order to communicate properly.

Click the Config icon to activate the UDS Panel Config applet.

### Utah-100/UDS Panel Applet



Figure 4-3.

Enter the default username and password (admin/admin).



Figure 4-4.

The following window will appear (next).

## The Control Applet

---

Use the radio buttons in the Panel Configuration section to navigate through the configuration screens; *System*, *Network* and *Encoding*.

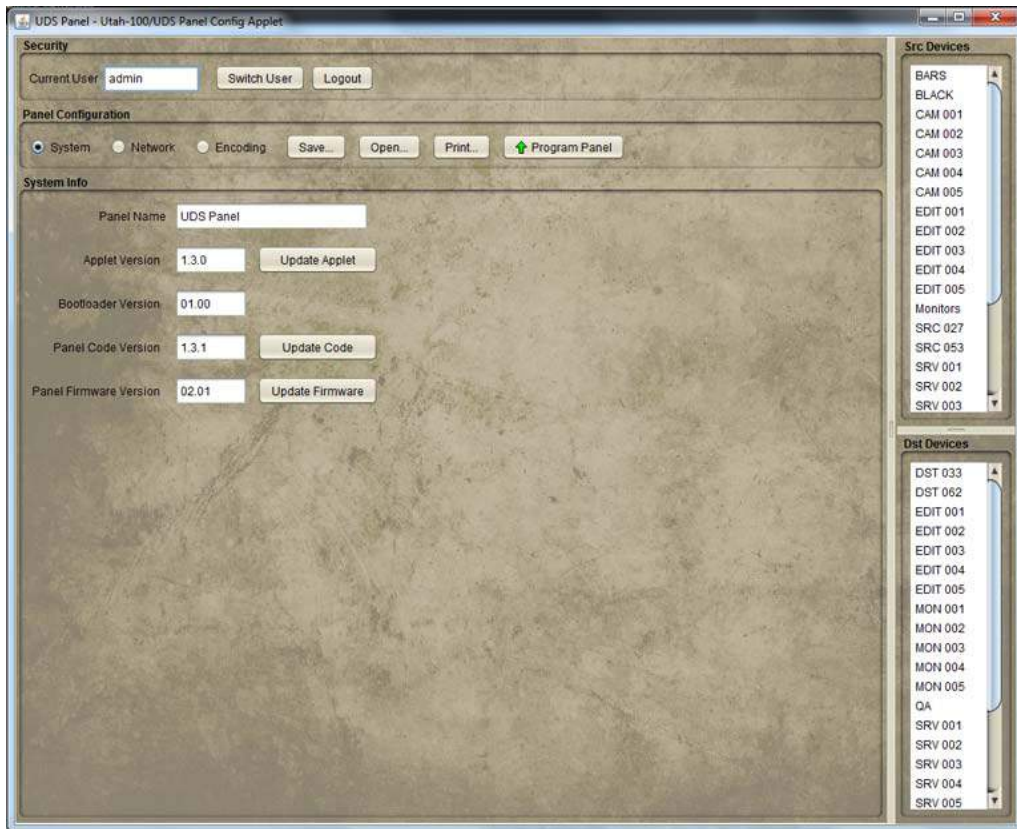


Figure 4-5.

**Save** - Saves the current panel configuration to a file on your computer.

**Open** accesses the directory containing previously saved panel configuration files.

**Print** allows you to produce a listing of all buttons and assignments when encoding is complete. Printing will produce the entire list along with a button label reference sheet that can be helpful for operators.



### System

When selected, the **System** radio button displays the current panel configuration detail (System Info area).

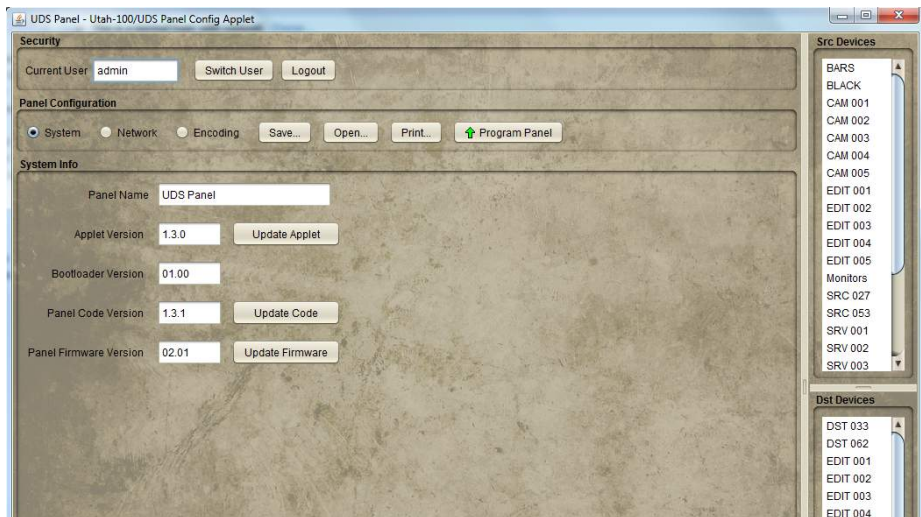


Figure 4-6.

You can edit the System Name, view the system version number, and update system components from the System Info screen.

### Network

Network configuration is essentially the same as network setup during Router configuration, with the exception that the user must specify the router IP address.

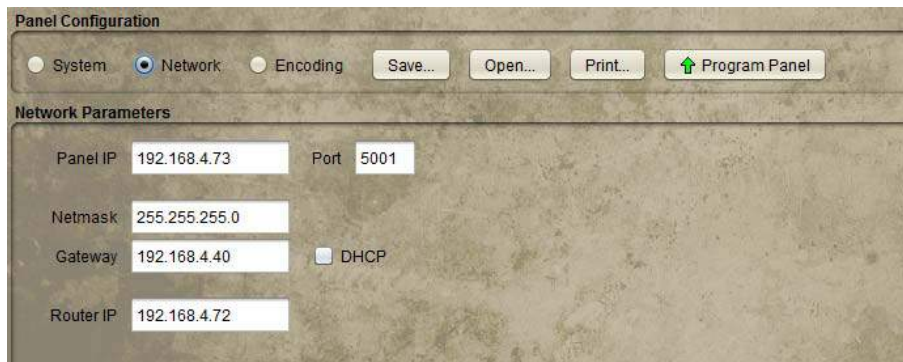


Figure 4-7.

### Network Parameters

Panel ID and address configuration is entered at the top of the display. 5001 is the Port default.

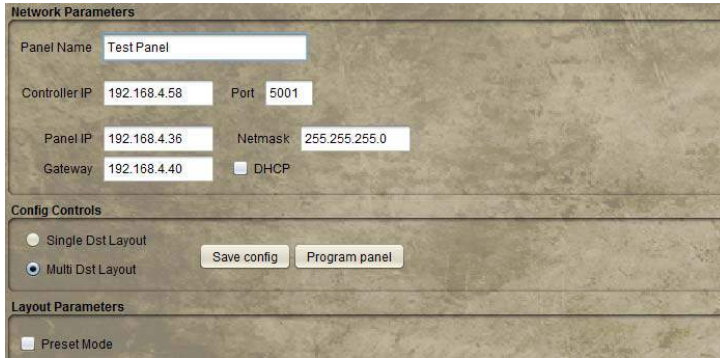


Figure 4-8.

When indicated, the DHCP checkbox will allow the program to complete its own designation.

### Encoding

Once you have logged in and the window is open, the activated panel layout will mimic the setup actions of the external control panel itself.


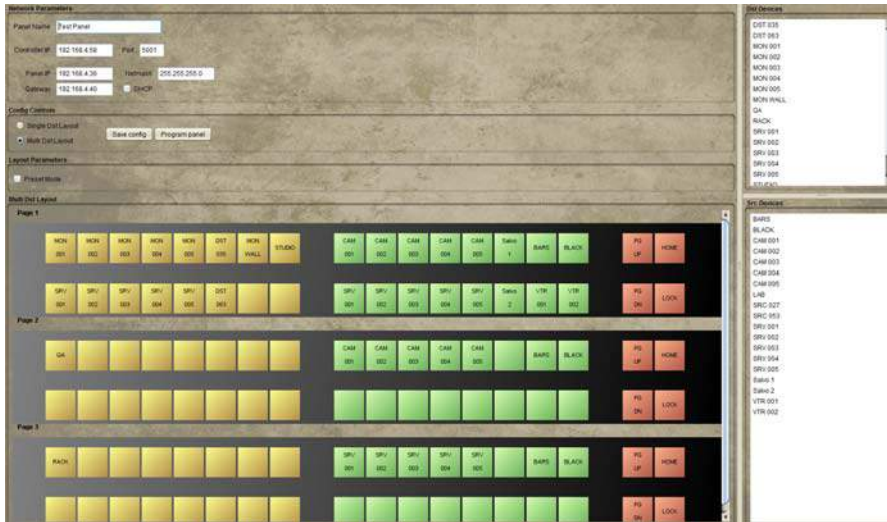


Figure 4-9.


### Panel Layout - Config Controls

The current panel's IP address is displayed, along with the controller to which the panel is connected.

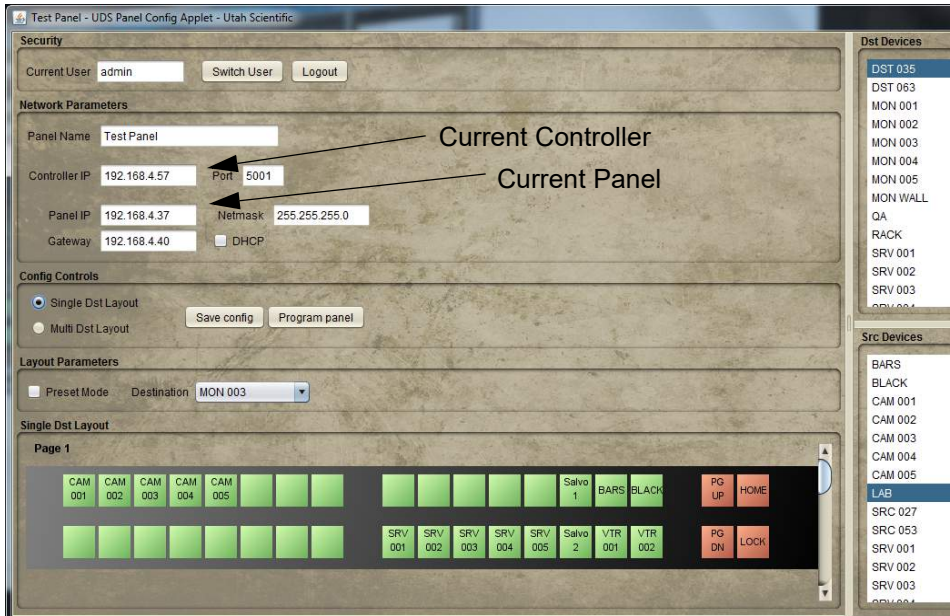

**Figure 4-10.**

This sets the destination applied to a single panel.

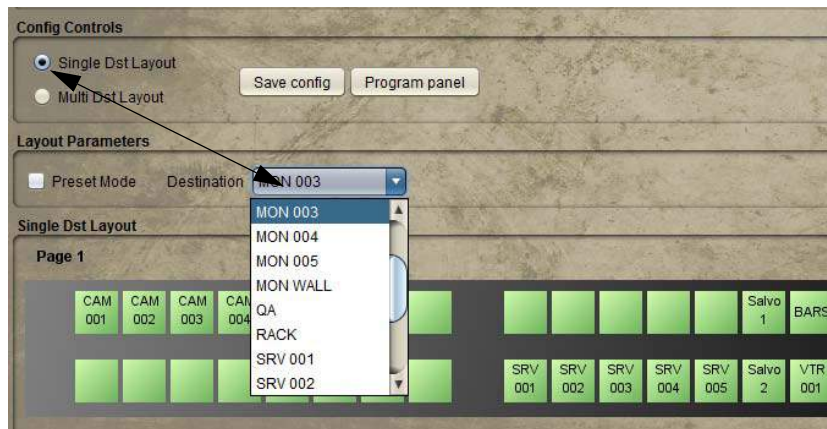

**Figure 4-11.**

## The Control Applet

Buttons are assigned by highlight device selections (1 or more), then dragging the list items to the individual buttons.


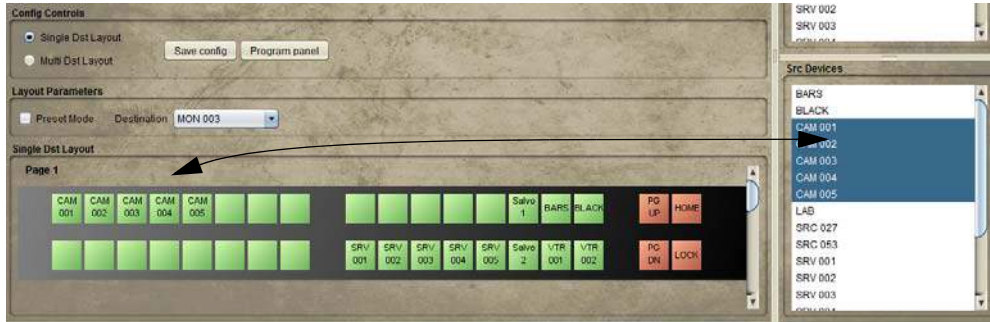


Figure 4-12.

A Multi Dst Layout with more than one destination assigned to the panel's destination buttons.



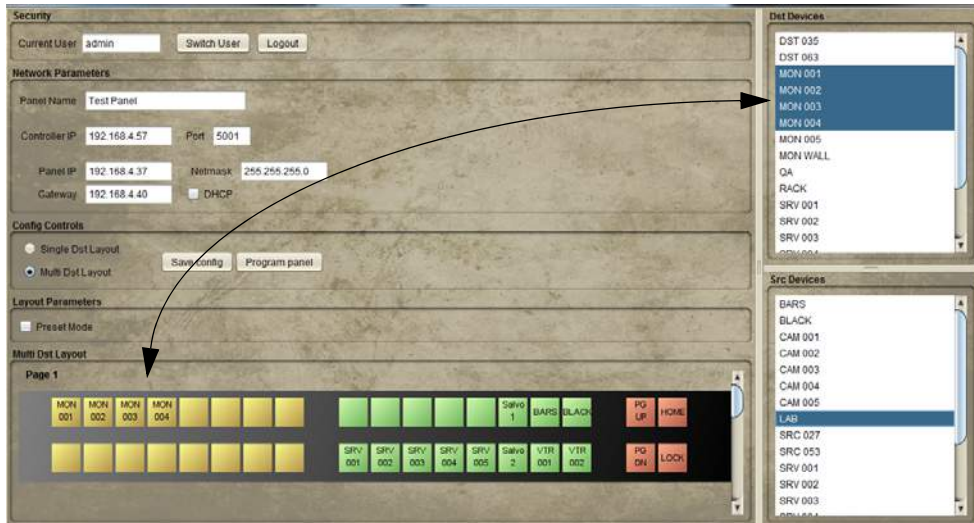

## Layouts - Single and Multi-Dst

### Single Destination

When indicated, 32 Sources are defined with one Destination selected for control. In this configuration you can drag Sources one at a time or double-click Sources from the list area (Dst and Src Devices list area).

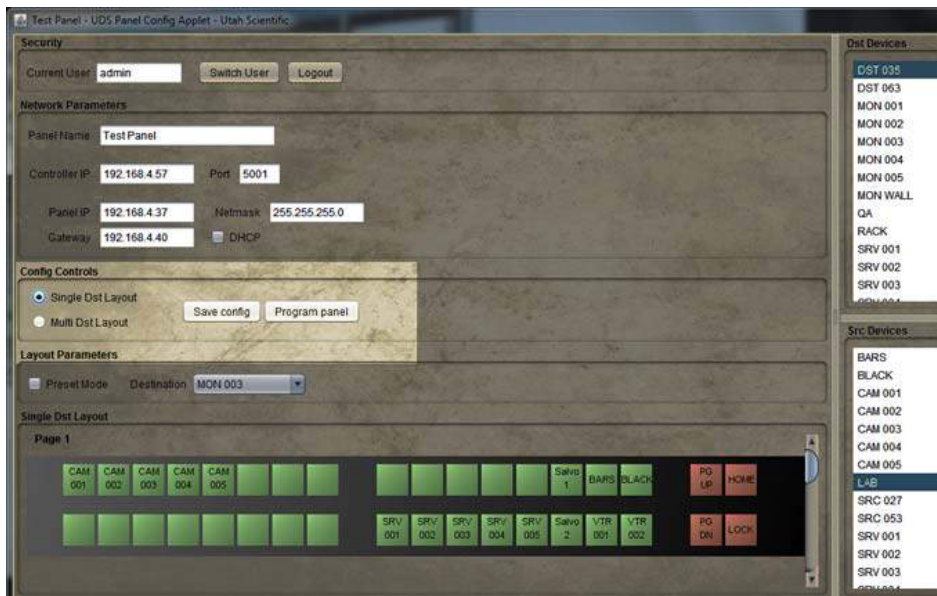


Figure 4-13.

The hardware panel will support up to three pages using these buttons, with the page and home buttons navigating through individual pages.

### Multi-Dest layout

Multi-Dest mode allows the user to simultaneously control 16 Destinations and 16 Sources. As with Single Destination mode, the page navigation includes three pages for operation.

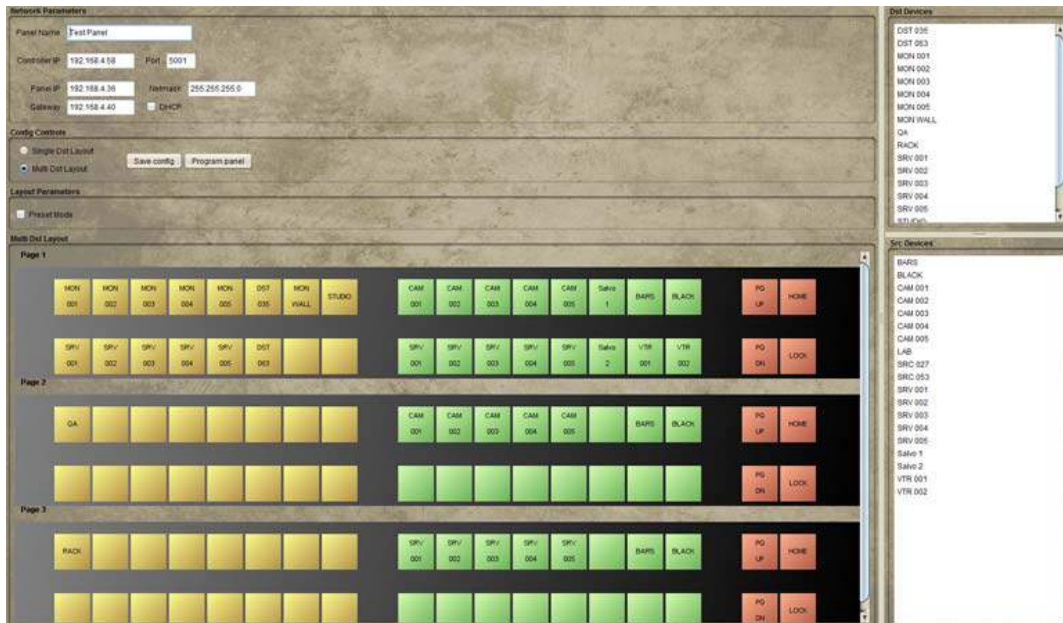


Figure 4-14.

In this mode you may drag destinations or sources to the panel buttons, with Destinations on the yellow buttons and Sources on the green buttons. The program will alert when a 'Wrong Device Type' is attempted. Right-clicking will clear the button display

Changes are committed once 'Save Config' is clicked, and actual hardware programming occurs when 'Program Panel' is clicked.





### XY-32 Configuration

Click the corresponding radio button to activate the XY-32 Layout.

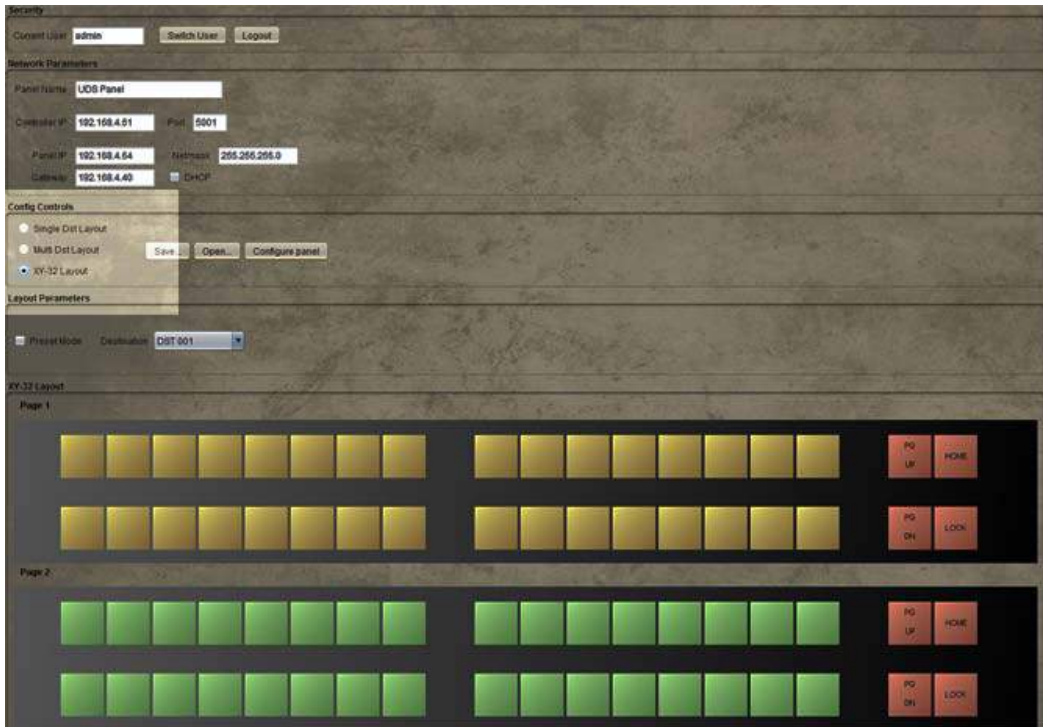


Figure 4-15.

This layout contains two pages; one page for 32 Destinations and one for 32 Sources.

## The Control Applet

---

Dragging Destinations from the listing (lower right) will apply to one button block only. In this way, list selections will never overflow into the next button block.

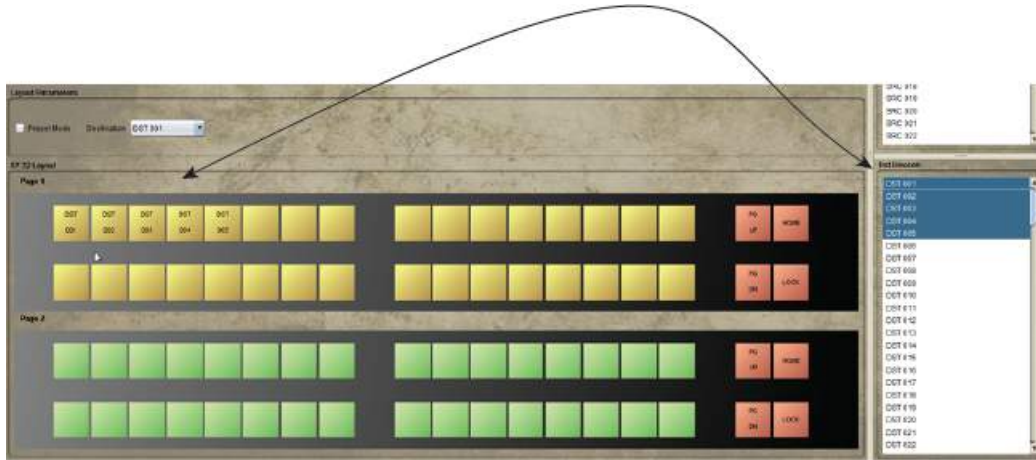


Figure 4-16.

Click the Page Up and Page Down buttons to view the configured panel pages.



Figure 4-17.



Click the **Configure Panel** button when button population for both Destination and Source buttons are complete.

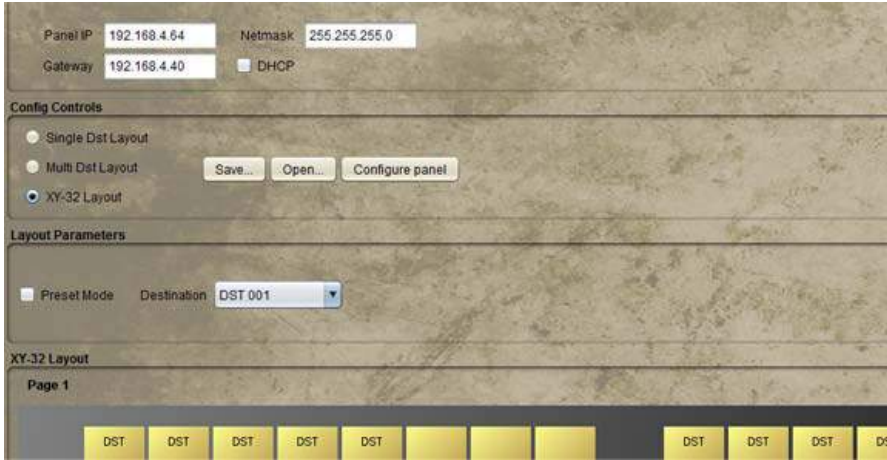


Figure 4-18.

### Print Option

The Panel Configuration contains a Print option that allows you to produce a listing of all buttons and assignments when encoding is complete. Clicking the **Print** button in the listing dialog will allow you to print the actual listing along with a button label reference sheet that can be helpful for operators.

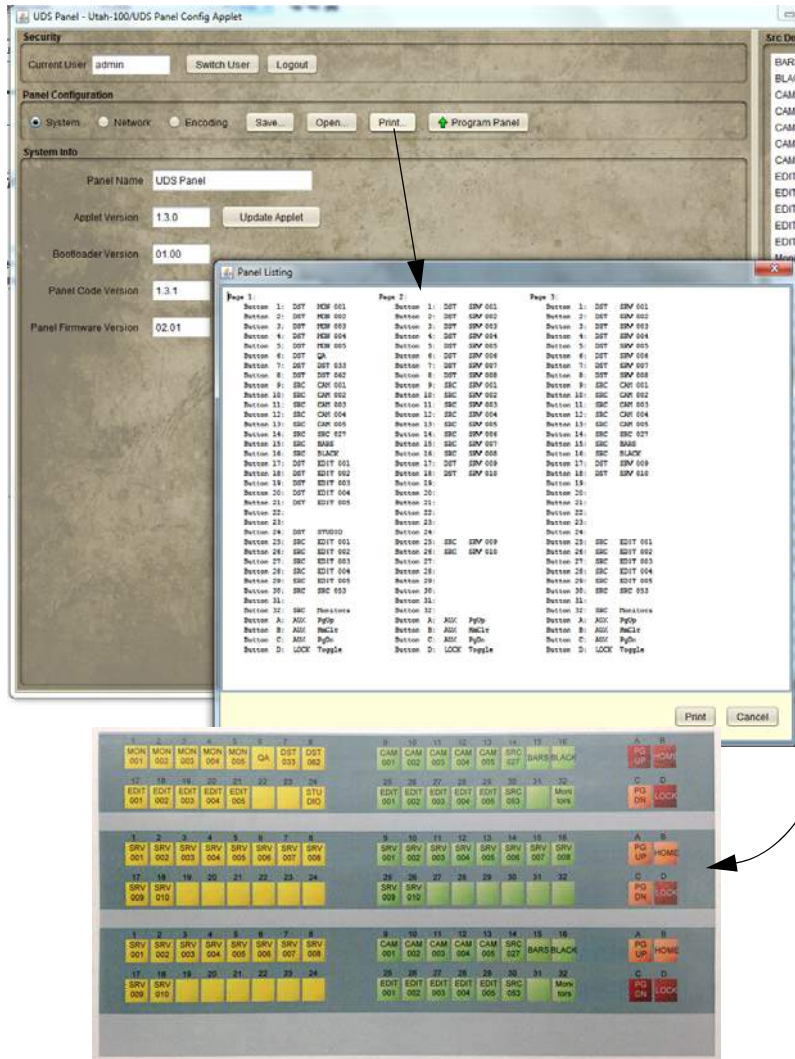


Figure 4-19.



## Control Panel

Click the Control Panel icon to activate the UDS Panel applet.

### Utah-100/UDS Panel Applet



Figure 4-20.

Once you have logged in and the window is open, the activated panel layout will mimic the setup actions of the external control panel itself.



Figure 4-21.

The panel is presented and operational at this time.





## Section 5

# Specifications and Alarms

## Frame Specifications

### ***Width***

19" Rack Mount

### ***Depth***

3.4"

### ***Sizes***

1RU -- Capacity: 32 inputs, 32 outputs

Power Consumption: <30W

2RU -- Capacity: 64 inputs, 64 outputs

Power Consumption: <50W

4RU -- Capacity: 144 inputs, 144 outputs

Power Consumption: <100W

### ***Power Supply***

External

Redundant supply optional

***Control Connections: RJ-45 Ethernet***

RJ-45 Serial

Vertical Interval Reference





## I/O Module Specifications

### ***Multi-Rate Digital Input Card***

Number of ports per card: 16

Formats supported: From 18Mbps up to 3Gbps

Connector Type: HD-BNC

### ***Multi-Rate Digital Output Card***

Number of ports per card: 16

Formats supported: From 18Mbps up to 3Gbps

Reclocking: All SDI rates up to 3Gbps

Connector Type: HD-BNC

Conforms to SMPTE 259C, 292, and 424

### ***FLEX-I/O Option***

Number of ports per card: 16 (8 SFP cages)

Dual-Channel SFPs support the following:

SDI up to 3Gbps on coax

SDI up to 3Gbps on fiber

PAL / NTSC Analog composite video

DVI/HDMI (single-port SFP)

IP-encapsulated DVB-ASI signals

### ***Alarm Conditions***

The UDS will enter a *temperature alarm* condition when the internal temperature exceeds the allowable limit. A temperature alarm is most likely caused by fan failures.

The Blue LED on the front left of the unit will turn Red when the UDS enters a temperature alarm condition. The alarm will clear when the temperature drops below the limit. The left LED will remain Blue when the UDS is not in temperature alarm.

The UDS will enter a *power supply* alarm condition when a redundant power supply fails. The alarm will clear on a system reset, or when the redundant supply returns to normal operation.

The Blue LED on the front right of the unit will turn Red when the UDS has entered a power supply alarm. The right LED will remain Blue when the UDS is not in a power supply alarm condition.



# Appendix A

## RCP1 Protocol for UDS

This appendix contains additional detail associated with serial interfacing; describing the basic commands supported for serial-to-router communications.

### Matrix Refresh Report Enable

ASCII CODE HEX

Command Code: ESC @ 1B, 40

Response: None

The ESC @ sequence causes the System Controller to routinely report crosspoint information to the external computer.

Refresh data is provided on an unsolicited basis with the data format as follows:

STX OOOO <Matrix Input> <Matrix Output> <Checksum> CR

Related Commands:

MATRIX REFRESH REPORT DISABLE

### Matrix Refresh Report Disable

ASCII CODE HEX

Command Code: ESC A 1B, 41

Response: None

Matrix Refresh reporting is described in the previous section. To disable the function, the Matrix Refresh Report **Disable Command** is provided.

Issuing the command string ESC A will disable Matrix Refresh Reporting.

Related Commands:

MATRIX REFRESH REPORT ENABLE

## Matrix Change Report Enable

ASCII CODE HEX

Command Code: ESC B 1B, 42

Response: None

The **Matrix Change Report Function** causes the controller to issue a **status update** whenever a change occurs in the Matrix Status. A change in status occurs when a Take is made resulting in a change to the status of the matrix. If a Take is made to a destination requesting the same sources that is already selected, then this will not cause a change in status, and consequently this will not be reported.

The ESC B Sequence causes the System Controller to **enable** the Matrix Change Reporting Function. Until the function is disabled, the controller will report changes in status without further request.

The change report data format is as follows:

FS OOOO <Matrix Input> <Matrix Output> <Checksum> CR

Related Commands:

MATRIX CHANGE REPORT DISABLE

## Matrix Change Report Disable

ASCII CODE HEX

Command Code: ESC C 1B, 43

Response: None

Matrix Change Reporting is described in detail in the previous section.

The ESC C Command sequence disables the Matrix Change Reporting Function.

Related commands:

MATRIX CHANGE REPORT ENABLE



## Matrix Take Report Enable

ASCII CODE HEX

Command Code: ESC D 1B, 44

Response: None

The **Matrix Take Report Function** causes the controller to issue a **status update**, whenever a Take occurs, regardless of whether the Take changes the state of the matrix. Only takes from the connection are reported.

The ESC D sequence causes the system controller to report any change in router matrix status (Take Reporting) to the ECD.

The Matrix Take Report format is as follows:

SOH OOOO <Matrix Input> <Matrix Output> <Checksum> CR

Related Commands:

MATRIX TAKE REPORT DISABLE

## Matrix Take Report Disable

ASCII CODE HEX

Command Code: ESC E 1B, 45

Response: None

The Matrix Take Report is described in detail in the previous section. The ESC E command sequence disables the Take reporting function.

Related commands:

MATRIX TAKE REPORT ENABLE

## Matrix Section Refresh

ASCII CODE HEX

Command Code: ESC L 1B, 4C

Response: None

The **ESC L sss eee** sequence causes the System Controller to report cross-point information to the external computer for the outputs between sss and eee (inclusive).

The controller will respond with a report consisting of a sequence of status messages ordered by output number, with each message formatted as follows:

STX OOOO <Matrix Input> <Matrix Output> <Checksum> CR

The report is terminated by the system controller with the ASCII Code US (Hex 1F).

To obtain Status of a Single Matrix Output, the command string should be terminated with a CR immediately following the starting matrix output number:

ESC L <Start Output> CR

The controller will respond with a single status message formatted as follows:

STX OOOO <Matrix Input> <Matrix Output> <Checksum> CR

## Matrix Take Command

ASCII CODE HEX

Command Code: SOH 01

Response: None

### Making a take.

Switcher cross points are changed by using the Matrix Take Command. The Input Number and Output Number identify each cross point. (This protocol supports levels, UDS does not support levels, any level set per the level mapping as will make a take.). The command message is structured as follows:

SOH <@@ | OO> <@@ | OO> <Matrix Input> <Matrix Output>  
|<Checksum>| or |CR|

To generate a Matrix Take Command, issue the command SOH followed by the code for enabled levels "OOOO" (note that this is the letter upper case O) input and output selection and terminated by either the optional checksum or carriage return (C/R). The following example, uses the Matrix Take Command to select input 45 to output 123.

Symbol SOH O O 0 4 5 1 2 3 C/R

HEX 01 4F 4F 30,34,35 31,32,33 0D



## CALCULATE <Checksum>

---

NOTE: This protocol allows control of routers with levels, for the UDS does not support levels, if any level is set, then the router will switch, use OO to make a take. Setting the level to none (use @@), will simply request status of the cross-point.

Related commands:

MATRIX STATUS REQUEST

## CALCULATE <Checksum>

A single-byte checksum in the range 20 hex through 7F hex calculated as follows:

Start with the hexadecimal value of the first byte (control code). To that value, Exclusive OR the second byte, Exclusive OR the third byte, etc. until all bytes have been Exclusive OR'ed. Finally, OR a hexadecimal 20 to the final Exclusive Or'ed value of all the bytes. By OR'ing in the 20 you ensure that the checksum is greater than or equal to a hexadecimal 20. This must be done to ensure an ASCII Control Code is NOT generated as the checksum.

## MISC items

The UDS does not allow 7 bit data and no parity.

Unknown sources are reported as 31F

- SC4 vs UDS:
- SC4 is 0 relative on sources and destinations, UDS is 1 relative.
- SC4 switches indexes, UDS switches ports.

SC4 has levels. UDS does not use levels. The RCP1 protocol includes levels. The UDS will accept any level from he protocol and switch on it. Status is always reported with all levels set.







# Appendix B

## System Update

### Introduction

This appendix contains instruction for updating the device code and applets on Utah Scientific UDS devices using a PC running Windows™. There are three major steps involved in updating each device:

- First you must run the installer in order to place the files in the default location on the PC.
- Next, perform the update using the applet's device configuration windows.
- Finally, you must reset the device and allow the update to be burned into the device flash.

The device configuration and status will not be changed by the update. But as a precaution, you should save the configuration of the device to a file before proceeding with the update.

The router device code will be updated to version 1.2.1 and the router applet will be updated to version 1.3.0. The panel device code will be update to version 1.3.1 and the panel applet will be update to version 1.3.0.

## System Setup Requirements

- The router must contain version 1.2.0 software and version 1.2.1 applet.
- The panel must contain version 1.3.0 software and version 1.2.1 applet.
- A Windows PC connected to the devices via Ethernet.
- A web browser to access the device applets.
- The installer file for the device you want to update:
  - usiUdsRouter-v1.2.5.exe for the router
  - usiUdsPanel-v1.3.2.exe for the panel

***These files can be dlwnloade from  
ftp://dcust:cust2pwd@ftp.utahscientific.com***

## Settings File Update



### ***Warning - Read Before Proceeding***


This update supports unique settings for each router connection. Settings consist of source status colors, and macros. As a result, existing settings will be lost following the update. You can simply reconfigure the settings as you prefer, or to restore the original settings, follow the steps below after completing the update.

If you would like to use your router settings (source status colors and macros) saved prior to the upgrade, you will need to copy the settings file to the correct router subfolder. The previous settings file can be found in your home directory under usi/uds/uds.settings. Copy it to the subfolder that corresponds to your router's IP address. For example, if your router's IP address were 192.168.4.180 and your home directory were C:\Users\usiuser, then you would copy the uds.settings file from C:\Users\usiuser\usi\uds to C:\Users\usiuser\usi\uds\192.168.4.180.



## Updating the Router Config Applet

1. As a precaution before continuing, open Router applet's Configuration window (below) and save the configuration of the device to a file on the PC. By doing so you can easily restore the device configuration *if necessary*.<sup>1</sup> (Please see Appendix C - Troubleshooting - for assistance with Configuration restoration.)

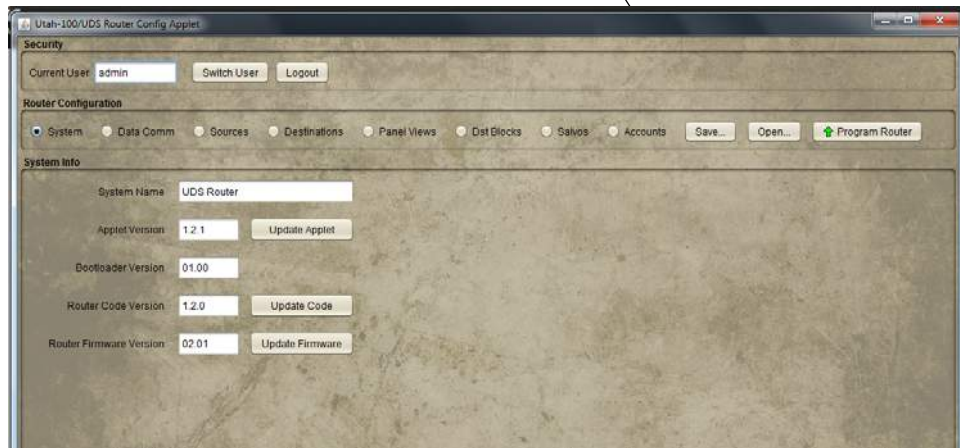

2. Run the appropriate installer on the PC.

File Name	Date/Time	Type	Size
usiUdsPanel-v1.3.1.exe	12/18/2012 1:48 PM	Application	1,804 KB
usiUdsRouter-v1.2.5.exe	12/18/2012 1:48 PM	Application	3,227 KB
usiUdsPanel-v1.3.1.nsi	12/18/2012 1:32 PM	NSI File	2 KB


Leave the default installation path. Take note of the path of the .uus file in the instructions as you close the installer. You will use this file in step 6 (below).

1. Early hardware version may require configuration restoration following a system reset.


## System Update

---

- Using the web browser on the PC, access the device applet and open the configuration window.

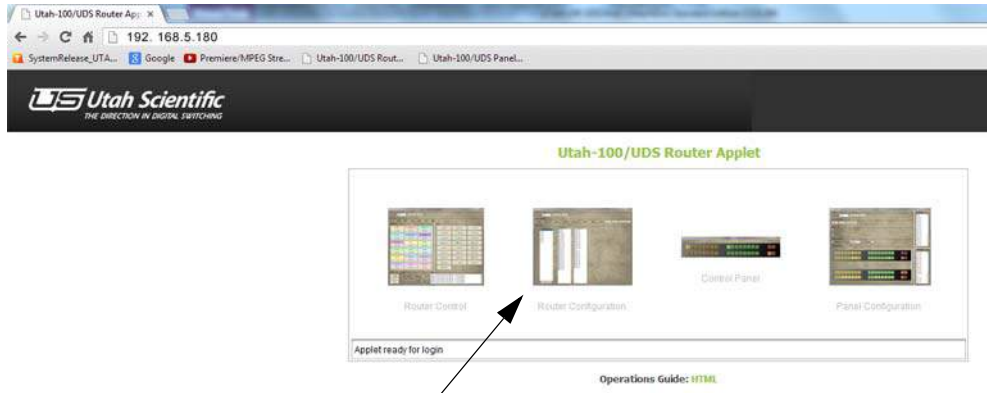

- Select the 'System' screen in the config window.

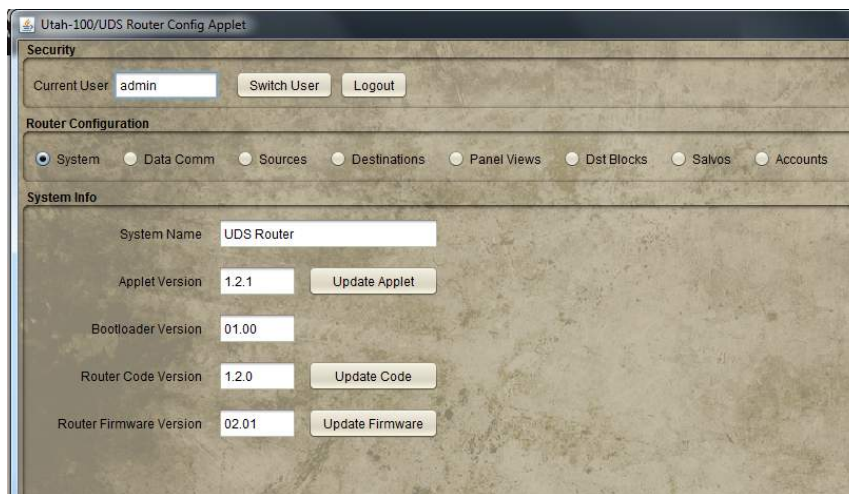


- Click the 'Update Applet' button.






6. Select the appropriate .uus file installed in step 2 (usiUdsRouter-v1.2.1.uus).

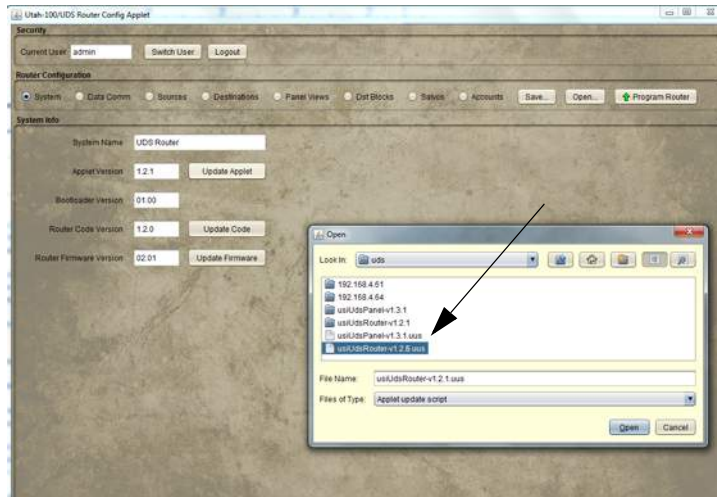

7. Several files will be transferred to the device. When the file transfer is complete, close any open web browser windows and reset the device by pressing the chassis reset button. The device will take a bit longer to reboot as the update is burned into the device flash.
8. The update is complete once the device has finished rebooting. The system will now operate with the new device software and a new version of the device applet.

## Updating the Panel Config Applet

1. As a precaution before continuing, open the Panel applet's Configuration window (below) and save the configuration of the device to a file on the PC. By doing so you can easily restore the device configuration if the file is somehow lost.<sup>1</sup> Please see Appendix C - Troubleshooting - for assistance with Configuration restoration.)

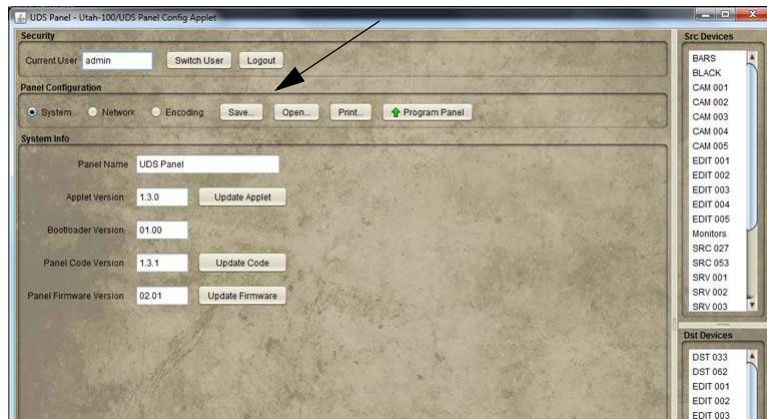

2. Run the appropriate installer on the PC.




Leave the default installation path. Take note of the path of the .uus file in the instructions as you close the installer. You will use this file in step 6 (below).

1. Early hardware version may require configuration restoration following a system reset.




3. Re-launch the PC's web browser, access the device applet, then open the configuration window.

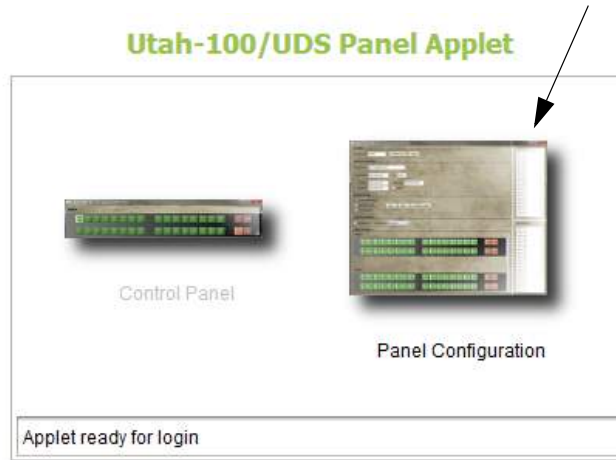

Operations Guide: [HTML](#)


4. Select the 'System' screen in the config window.

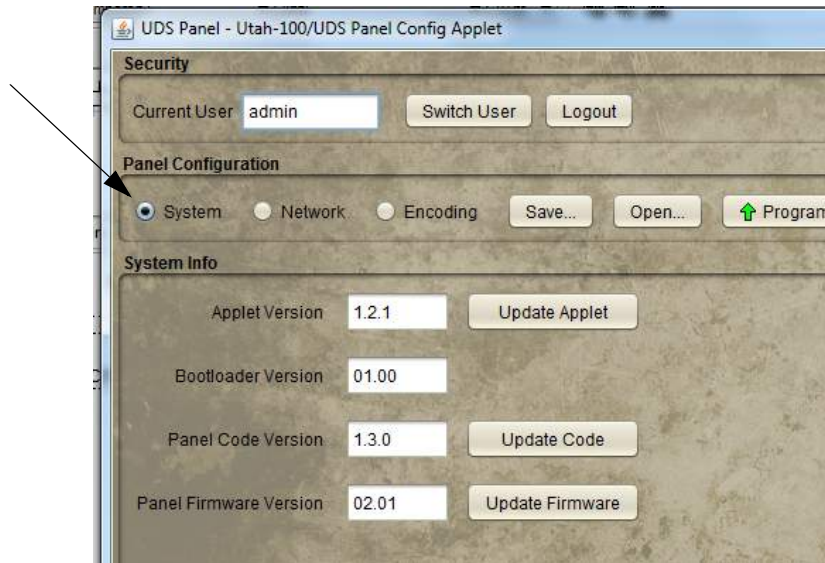

5. Click the 'Update Applet' button.



6. Select the appropriate .uus file installed in step 2 (usiUdsPanel-v1.3.1.uus).

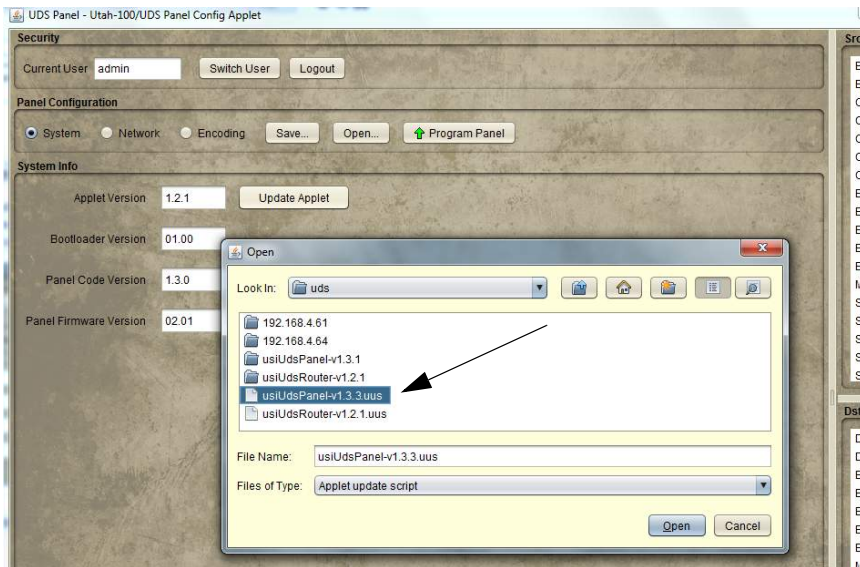

7. Several files will be transferred to the device. When the file transfer is complete, close any open web browser windows and reset the device by pressing the chassis reset button. The device will take a bit longer to reboot as the update is burned into the device flash.
8. The update is complete once the device has finished rebooting. The system will now operate with the new device software and a new version of the device applet.





# Appendix C

## Troubleshooting

### **Hard Reset**

(This resets the device and implements changes to software and network settings that are changed without putting it back to the factory default settings)

- Locate the small hole on the rear of the device and press the button within releasing it quickly, using a small tool such as a paper clip.
- If the reset button is not easily accessible, power cycle the device by removing the AC end of the cord and not directly at the device.

### **Factory Reset**

(This resets the device and rewrites all of the data parameters such as IP addresses and router tables to the default settings)

- Locate the small hole on the rear of the device and press and hold the button within for 5 seconds or longer. NOTE: the LED's on the Ethernet port of the unit should go dim while the button is pressed.

### **Serial Port Network Configuration**

(These steps will temporarily set the network parameters so that the device applet can access the device in the event that the network settings in the device do not match the settings of the network that the device is connected to.)

1. Locate the RJ45 to 9pin adapter labeled 'UDS Diag' provided with the system
2. Connect a straight through CAT5 cable between one side of adapter and the 'Serial' port on the back of the device.
3. Connect the 9pin side of the adapter to the computer.
4. Use terminal program such as TeraTerm or HyperTerminal and set the serial port settings to 115,200 baud and 8 data bits, no parity and one stop bit.

5. At the shell prompt, type 'ipconfig(space)staticip(space)<enter IP address here>(space)<enter network subnet here, such as 255.255.255.0>(space)<enter optional gateway address here>
6. Press the enter key to temporarily implement the settings in step 5. Note: this is temporary and only valid until the device is rebooted. You must program the device from the device applet in order to permanently set the network configuration.
7. The device should now be accessible using the device applet from the web browser.

### ***System Fails to Reboot Properly***

There are earlier versions of router and panel hardware that had the potential of corrupting the device configuration, causing the device to not reboot properly. If this occurs,

1. Perform factory reset as shown above.
2. If your device is not using the default network configuration, then use the quick start documentation or follow the 'Serial Port Network Configuration' steps above to temporarily set the network parameters in the device so they can be accessed and configured via the device applet.
3. Open the saved device configuration file to restore the configuration and program the device.

### ***Applet Opens with Wrong or Old View***

- After programming the update to the device, sometimes the status and other operations don't work properly. Either refresh the browser window using the browser refresh button or simply close and re-open the browser and access the device applet.



# Appendix D

# Maintenance Functions

## In This Appendix

This appendix provides a detailed procedure for changing button legends. The following topics are discussed:

Changing Button Legends .....	D-2
Using the Template .....	D-3
Removing and Inserting button legends .....	D-5
Ordering Parts .....	D-6

## Changing Button Legends

The buttons on each UCP panel have legends (labels) that can be changed easily, or which can be *customized* if the sources and destinations in your facility change. A button legend “kit” is provided with each panel.

The button legend kit includes the following item:

**Table D-1. Legend Kit Components**

Part Number	Quantity	Description
08101-0046	1	1.44MB floppy disk, containing the legend template document ( <b>08101-0061.DOC</b> ). This Microsoft® Word document contains the default templates for each of the five UCP panels, plus instructions.

The following item can be purchased separately from Utah Scientific in the event customized labels are to be prepared by the user:

00198-0123	5 (sheets)	Frosted paper, specially designed to diffuse light.
------------	------------	---

This item should be purchased separately if needed for customized labels:

	1	Clear Spray Fixative, specially designed to prevent the laser print from transferring to the button’s lens.
--	---	---

The procedures (next) provide detailed instructions for using the Word template, and inserting the new legends in the buttons.



### Using the Template

The legend template document allows you to modify the default legends for each selected panel, to meet your system requirements.

Use the following steps to change or modify button legends:

1. Locate the (supplied) Utah Scientific floppy disk that contains the template document (**08101-0061.DOC**), and insert the disk in your PC's floppy drive. Open the drive's directory, and copy the file to a new folder on your hard drive.
2. Ensure that Microsoft Word is installed on your PC.
3. Open the template document, and scroll down to locate the template for panel whose legends you want to modify.
4. Place your cursor in the desired cell and click.

For reference, the figure below illustrates a portion of the UCP XY/16 template.

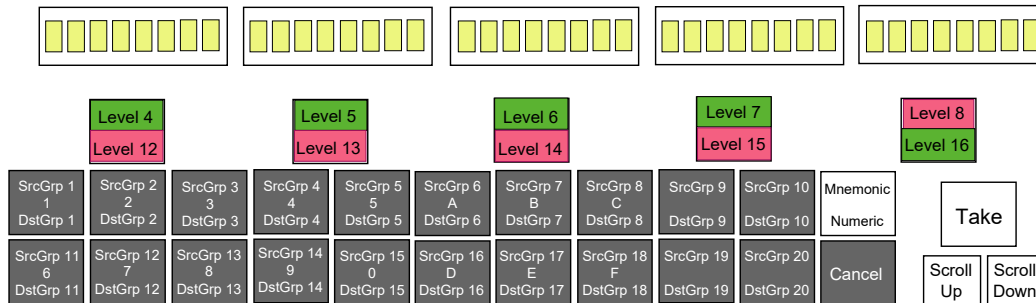


Figure D-1. Portion of UCP XY/16 Template

5. Type the desired legend in the cell.

Please note the following points regarding the template:

- The legend is automatically centered. You can place up to three lines of text in a cell by pressing **ENTER** at the end of each line.
- The default text is 10 point Avant Garde MD BT. If you have a compact legend, you may be able to increase the font size to 11 points, or you may have to decrease the font size to 9 points if additional characters are required on a line.

6. Once you have completed (and proof-read) your template, print the page on a Laser Printer using the special (supplied) frosted paper.
7. If you want to keep the old template intact, save the modified file under a new name using the “save as” procedure.
8. To improve the long term quality of the legend, and to prevent the laser print ink from transferring to the button’s lens, it is recommended that you apply a clear spray fixative as follows:
  - Lay the printed template on a flat, horizontal surface.
  - Spray the template lightly and uniformly with the fixative, and allow it to dry completely.
9. Use a scissors (or Exacto-knife) to cut each new legend cell at its boundaries.

This completes the procedure for modifying legends. Please continue with the “**Inserting Legends in Buttons**” procedure.



## Removing and Inserting button legends

Use the following figure for reference during this procedure. The tool/legend-replacement assembly is Utah Scientific Part # 42610-0012.

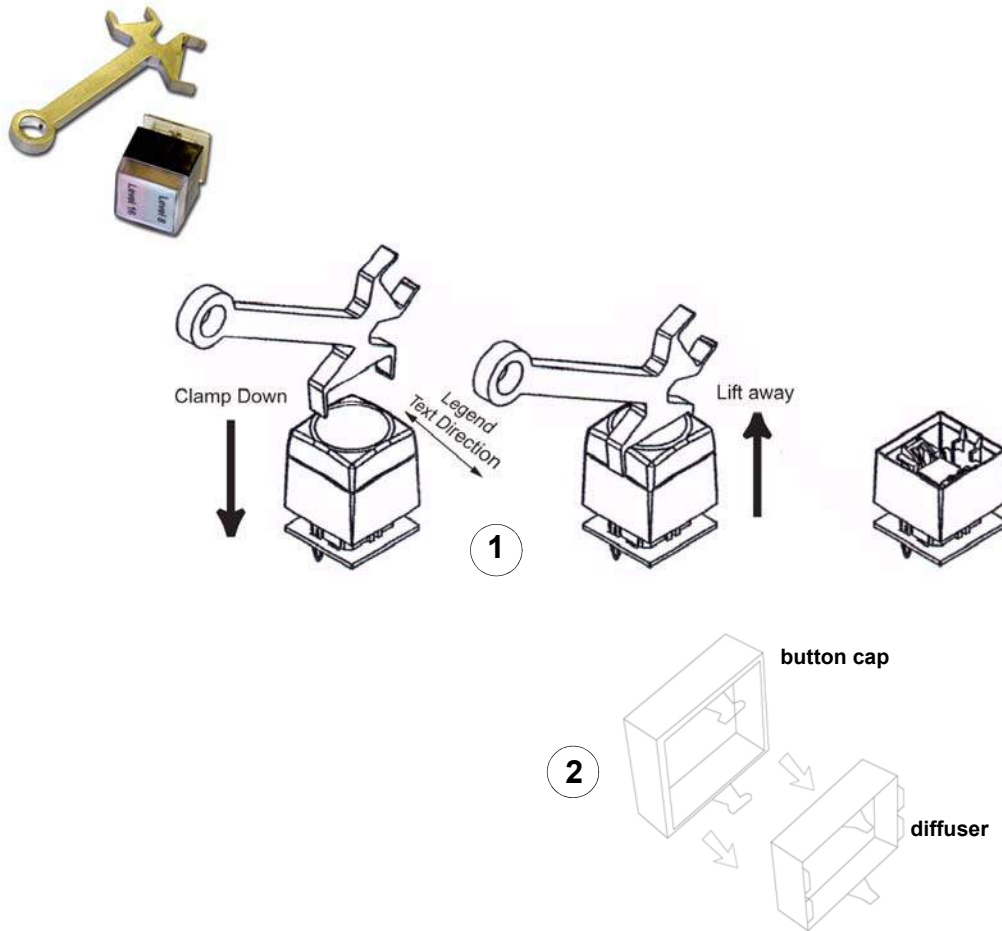


Figure D-2. Legend removal procedure

1. Using the provided tool, clamp down on the button top and carefully remove it from the switch case by gently pulling it outwards.
2. Carefully pull the inner diffuser out from the button cap to expose the legend assembly.

## Maintenance Functions

---

3. Remove the old legend and/or bi-color slip from the button cap, then replace with the new one(s). You may need a small pic to pry the legend loose.
4. Reverse the above procedure to re-assemble the button.
5. Repeat the procedure from step 1 for each legend that you want to change.

## Ordering Parts

**Utah Scientific, Inc.**  
4750 Wiley Post Way  
Salt Lake City, Utah 84116-2878 USA

- **Telephone:** +1 (801) 575-8801
- **Customer Support (Voice):** +1 (800) 447-7204
- **Customer Support (Fax):** +1 (801) 537-3009



---

---

## Numerics

140033-15 Adapter Pinout and Schematic 1-10

## A

Accounts 3-22

Adapter Pinout and Schematic 1-10

Alarm Conditions 5-4

All Sort Order 3-15

Alpha 3-15

alpha numeric port 3-17

Alpha Sort 3-17

Applet

opening with wrong or old view B-2

Audio

control panel browser utility 3-32

## B

Base Crosspoint Card (121352-1) Revision 02 1-13

Bi-Directional Circuits 1-15

Browser Utility 2-1

Button Color Scheme 3-30

Button Legends 1-19

button legends

removing and inserting D-5

Buttons

change legends D-2

install new legends D-5

using legend template D-3

## C

CALCULATE A-5

Change

button legends D-2

Circuit Descriptions

crosspoint base card 1-1

Components 1-13

Config Controls 4-7

Configurations 4-1, 5-1

Configure Panel 2-13, 4-13

Configure Router 3-13

Control Applet 4-1

Control Circuitry 1-14

Control Connections

RJ-45 Ethernet 5-2

Control Panel 4-15

Crosspoint 1-15

## D

Data Comm 3-4

Depth 5-1

Destination Blocks 3-18

Destination Creation

within list 3-12

Destination creation 3-10

Destination Reset Mode (checkbox) 3-31

Destinations 3-10

DHCP 3-5

Diagnostic Serial Port 1-9

Dst Block 3-18

## E

Encoding 4-6

Ethernet Connections 1-7

Existing Network 2-5

Expansion Connectors 1-15

Expansion Input Card (121353-1) Revision 02 1-16

Expansion Output Card 1-17

## F

Factory Reset B-1

FLEX-I/O Option

basic specification 5-3

Frame Specifications 5-1, A-1, B-1

Front Panel Controls and Indicators 1-12

Front View

UTAH-100/UDS CP 4-2

## H

Hard Reset B-1

## I

I/O Module Specifications 5-3

Independent Network 2-3

Input Circuits 1-15, 1-16

Input Switches and LED's 1-19

Insert button legends D-5

Installation 1-6

button legends D-5

Introduction 1-1

Network Configuration 2-1

The Control Applet 4-1

## L

Label, change button D-2

Layouts - Single and Multi-Dest 4-9

Legends, change button D-2

Local Control Panel (121355-1) Revision 02 1-18

---

## M

- Macro buttons 3-35
- Maintenance Functions D-1
- Management
  - source and destination 3-25
- Matrix Change Report Disable A-2
- Matrix Change Report Enable A-2
- Matrix Refresh Report Disable A-1
- Matrix Refresh Report Enable A-1
- Matrix Section Refresh A-3
- Matrix Take Command A-4
- Matrix Take Report Disable A-3
- Matrix Take Report Enable A-3
- Multi-Dest layout 4-10
- Multiple Destination Selection 3-31
- Multi-Rate Digital Input Card
  - basic specification 5-3
- Multi-Rate Digital Output Card
  - basic specification 5-3

## N

- Network 4-5
- Network Configuration 2-1, 2-3
- Network Parameters 4-6
- New Configuration
  - Existing Network 2-5
  - Independent Network 2-3

## O

- Organizing 3-14
- Output Circuits 1-15, 1-17
- Output Switches and LED's 1-19

## P

- Panel Applet Activation 2-12
- Panel Config Applet
  - updating A-6
- Panel Configuration 4-3
- Panel Layout
  - config controls 4-7
- Panel Views 3-14
- Power Connections 1-6
- Power LED 1-12
- Power Supplies 1-16, 1-17
- Power Supply
  - basic specification 5-1
- Preset (checkbox)
  - control panel browser utility 3-28
- Preset List Window 3-35

- Print Option 4-14
- problems with reboot B-2
- Program
  - button 3-15
- Program Router
  - button 2-11, 3-5, 3-24

## R

- RCP-1 Serial Port 1-8
- Rear View
  - UTAH-100/UDS CP 4-2
- Reference Connections 1-10
- Reset Switch 1-12
- Router Applet 3-1
- Router Applet Activation 2-9
- Router Config Applet
  - updating A-3
- Router Configuration 3-1
- Router Control 3-25
- router port 3-16
- Router Sort 3-16

## S

- Salvos 3-19, 3-34
- Save Button 3-24
- Security 3-3
- Serial Port Network Configuration B-1
- Serial RCP-1 3-4
- Settings File Update A-2
- Single Destination 4-9
- Sizes 5-1
- Sorting Option 3-15
- Source Creation 3-6
- Source creation 3-8
- Sources 3-6
- System 4-5
- System Architecture 1-3
- System Diagrams 1-4
- System Interface 1-18
- System Setup 1-1
- System Setup Requirements 2-2, A-2
- System Update A-1

## T

- TCP RCP-3 3-4
- Technical Description
  - UDS 10x10, 20x20, 8x32 1-1
- Template, button legend D-3
- Troubleshooting B-1

---

---

## **U**

UDS CP 4-2

Using

    button legend template D-3

Using the Template D-3

UTAH-100/UDS Browser Utility 3-1

## **V**

Video Connections 1-11

## **W**

Width 5-1

## **X**

XY-32 Configuration 4-11