UCI-400 Control Translation Unit

Monday, October 04, 2010

UCI-400 Control Translation Unit

Monday, October 04, 2010

Note: Com 4 may be used as a time code input. If desired set port to RS-422 and use this pin out. 1=TC+, 2-4=Not used, 5=GND, 6-8=Not used, 9=TC-

4)RS-422 or 232 Serial Ports & Pin#'s
RS-232: 1=CD, 2=RX, 3=TX, 4=DTR, 5=GND, 6=DSR, 7=RTS, 8=CTS, 9=Not used
RS-422: 1=Not used. 2=RX-, 3=TX+, 4=Not used, 5=GND, 6=Not used, 7=RX+, 8=TX-, 9=Not used
Note: To select RS-422 or RS-232 open the panel and locate the jumpers in the lower right hand corner of the panel as you view it from the top with the rear of the panel closest to you.

NOT USED

NOT USED

NOT USED

NOT USED

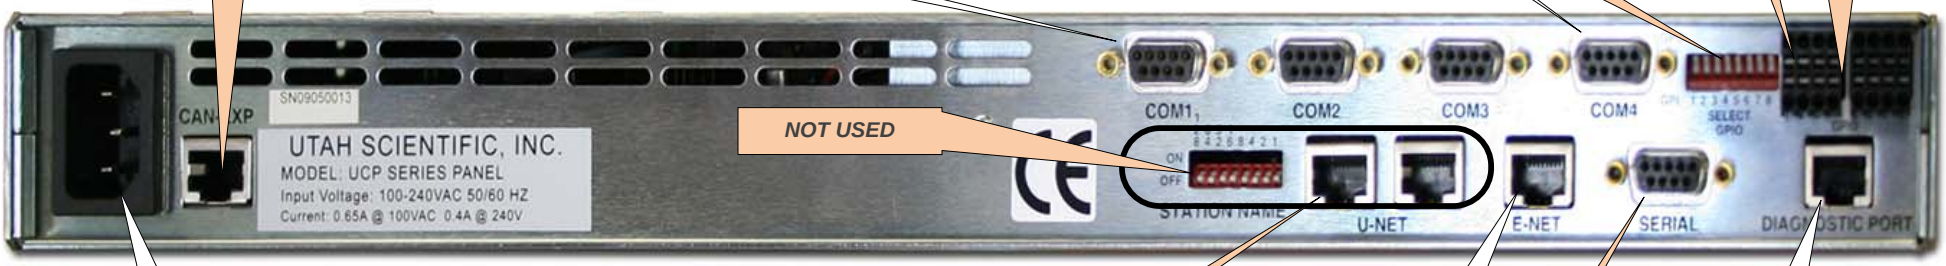

NOT USED

Power Connector

NOT USED

Typical CAT5 Ethernet connection

NOT USED

Configuration port used for panel setup. Use RJ-45 to 9 pin adapter labeled MC-2020. Baud rate 19.2K baud, 8, None, 1

RJ-45 Adaptor